



HIKVISION

**Machine Vision
Area Scan GigE Camera**

User Manual

UD.6L0201D2172A01

User Manual

COPYRIGHT ©2015 Hangzhou Hikvision Digital Technology Co., Ltd.

ALL RIGHTS RESERVED.

Any and all information, including, among others, wordings, pictures, graphs are the properties of Hangzhou Hikvision Digital Technology Co., Ltd. or its subsidiaries (hereinafter referred to be “Hikvision”). This user manual (hereinafter referred to be “the Manual”) cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision. Unless otherwise stipulated, Hikvision does not make any warranties, guarantees or representations, express or implied, regarding to the Manual.

About this Manual

This Manual is applicable to Machine Vision GigE Camera.

The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the company website (<http://www.hikrobotics.com/en/>).

Please use this user manual under the guidance of professionals.

Trademarks Acknowledgement

HIKVISION and other Hikvision’s trademarks and logos are the properties of Hikvision in various jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners.

Legal Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED “AS IS”, WITH ALL FAULTS AND ERRORS, AND HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL HIKVISION, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY

OF SUCH DAMAGES.

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. HIKVISION SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES. IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Regulatory Information

FCC Information

FCC compliance: This equipment has been tested and found to comply with the limits for a digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

EU Conformity Statement



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the EMC Directive 2004/108/EC, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.

Safety Instruction

These instructions are intended to ensure that the user can use the product correctly to avoid danger or property loss.

The precaution measure is divided into ‘Warnings’ and ‘Cautions’:

Warnings: Serious injury or death may be caused if any of these warnings are neglected.

Cautions: Injury or equipment damage may be caused if any of these cautions are neglected.

Warnings Follow these safeguards to prevent serious injury or death.	Cautions Follow these precautions to prevent potential injury or material damage.



Warnings:

- Please adopt the power adapter which can meet the safety extra low voltage (SELV) standard. And source with 12 VDC (depending on models) according to the IEC60950-1 and Limited Power Source standard.
- To reduce the risk of fire or electrical shock, do not expose this product to rain or moisture.
- This installation should be made by a qualified service person and should conform to all the local codes.
- Please install blackouts equipment into the power supply circuit for convenient supply interruption.
- Please make sure that the ceiling can support more than 50(N) Newton gravities if the camera is fixed to the ceiling.
- If the product does not work properly, please contact your dealer or the nearest service center. Never attempt to disassemble the camera yourself. (We shall not assume any responsibility for problems caused by unauthorized repair or maintenance.)



Cautions:

- Make sure the power supply voltage is correct before using the camera.
- Do not drop the camera or subject it to physical shock.
- Do not touch sensor modules with fingers. If cleaning is necessary, use a clean cloth with a bit of ethanol and wipe it gently. If the camera will not be used for an extended period of time, put on the lens cap to protect the sensor from dirt.
- Do not aim the camera lens at the strong light such as sun or incandescent lamp. The strong light can cause fatal damage to the camera.
- The sensor may be burned out by a laser beam, so when any laser equipment is being used, make sure that the surface of the sensor not be exposed to the laser beam.
- Do not place the camera in extremely hot, cold temperatures (the operating temperature should be between -0°C to 50°C), dusty or damp environment, and do not expose it to high electromagnetic radiation.
- To avoid heat accumulation, ensure there is good ventilation to the device.
- Keep the camera away from water and any liquids.
- While shipping, pack the camera in its original, or equivalent, packing materials. Or packing the same texture.
- Improper use or replacement of the battery may result in hazard of explosion. Please use the manufacturer recommended battery type.

Table of Contents

Chapter 1 Overview	9
1.1 Introduction.....	9
1.2 Main Features.....	9
1.3 Specifications	10
1.3.1 MV-CA003-30GM/GC Specification	10
1.3.2 MV-CA003-30GM/GC Response Curve	11
1.3.3 MV-CA013-20GM/GC Specification	11
1.3.4 MV-CA013-20GM Response Curve.....	13
1.3.5 MV-CA013-30GM/GC Specification	13
1.3.6 MV-CA013-30GM/GC Response Curve	14
1.3.7 MV-CA030-10GM/GC Specification	15
1.3.8 MV-CA030-10GM/GC Response Curve	16
1.3.9 MV-CA050-20GM Specification.....	16
1.3.10 MV-CA050-20GM Response Curve.....	17
1.3.11 MV-CA060-10GC Specification.....	18
1.3.12 MV-CA060-10GC Response Curve.....	19
1.3.13 MV-CA060-11GM Specification.....	19
1.3.14 MV-CA060-11GM Response Curve.....	20
1.3.15 MV-CA003-50GM/GC Specification	21
1.3.16 MV-CA003-50GM/GC Response Curve	22
1.3.17 MV-CA023-10GM/GC Specification	22
1.3.18 MV-CA023-10GM/GC Response Curve	23
1.3.19 MV-CA050-10GM/GC Specification	24
1.3.20 MV-CA050-10GM/GC Response Curve	25
1.3.21 MV-CE100-30GM/GC Specification.....	25
1.3.22 MV-CE100-30GM/GC Response Curve.....	26
1.3.23 MV-CA003-20GM/GC Specification	27
1.3.24 MV-CA003-20GM/GC Response Curve	28
1.3.25 MV-CA013-20GN Specification	28
1.3.26 MV-CA013-20GN Response Curve	29
1.3.27 MV-CA050-20GN Specification	30
1.3.28 MV-CA050-20GN Response Curve	31
1.4 Camera Physical Interfaces.....	31
1.4.1 Camera Dimension	31
1.4.2 Rear Panel Introduction	33

1.4.3	Power and I/O Interface Introduction	34
1.4.4	Installation Accessories.....	35
Chapter 2	<i>Camera Installation and Configuration.....</i>	36
2.1	Installing the Camera	36
2.2	Network Configuration.....	36
2.2.1	Local Network Configuration	37
2.2.2	Camera IP Configuration	38
2.3	Camera Configuration.....	40
2.3.1	Setting via Attribute Tree	40
2.3.2	Setting via Menu Bar	43
Chapter 3	<i>Functions.....</i>	45
3.1	Device Control.....	45
3.1.1	Name Modification	45
3.2	Image Format and Frame Rate	46
3.2.1	Camera Data Format	46
3.2.2	Frame Rate.....	49
3.2.3	ROI Setting	49
3.3	Global Shutter and Rolling Shutter.....	51
3.3.1	Global Shutter	51
3.3.2	Rolling Shutter.....	51
3.4	Image Acquisition and Transmission.....	53
3.4.1	Internal Trigger Mode	53
3.4.2	External Trigger Signal and Working Mode	54
3.5	Strobe Output	56
3.6	Acquisition Mode under External Trigger.....	59
3.7	Overlap Exposure and Non-overlap Exposure.....	61
3.7.1	Non-overlap Exposure	61
3.7.2	Overlap Exposure	62
3.8	Counter Control	63
3.9	Imaging Parameter Setting	65
3.9.1	Exposure Time	65
3.9.2	Gain Control	65

3.9.3	White balance	66
3.9.4	Region Setting of Auto Functions	67
3.9.5	Look Up Table (LUT)	68
3.9.6	Gamma Correction.....	69
3.9.7	Brightness, Hue and Saturation.....	70
3.9.8	Image Reverse.....	70
3.9.9	HDR Cycling Mode	71
3.9.10	Test pattern.....	72
3.10	I/O Electric Feature	74
3.10.1	Line0 Opto-isolated Input Circuit	74
3.10.2	Line1 Opto-isolated Output Circuit	75
3.10.3	Line2 Configurable Bi-direction I/O Circuit.....	77
3.11	Transport Layer Control	79
3.11.1	DHCP and Persistent IP	79
3.11.2	Efficient Bandwidth and Setting	80
3.12	User Parameter and Preference Setting.....	81
3.12.1	Parameters Saving and Loading.....	81
3.12.2	Embedded Information	82
3.13	Firmware Updating.....	85
Chapter 4	<i>Troubleshooting.....</i>	86
4.1	Indicator Status Definition	86
4.2	Indicator Status Description.....	86
4.3	FAQ	87
Chapter 5	<i>Support.....</i>	88
Appendix	89

Chapter 1 Overview

1.1 Introduction

The Machine Vision Camera is an image capturing device capable of real-time transmission of uncompressed image through a gigabit Ethernet interface. Remote image capturing and camera control, for example, the operating mode and the image parameters adjustment, are supported by client software.

1.2 Main Features

- The gigabit Ethernet interface provides the bandwidth of 1 Gbps and reaches the maximum transmission distance of 100 meters.
- 128 MB onboard memory stores images for burst transmission and retransmission.
- Supports AEC (automatic exposure control), LUT, Gamma Correction, etc..
- Use hardware external trigger or software trigger to synchronize several cameras or cameras with external devices.
- Supports image capturing with different exposure modes.
- The color camera adopts the color interpolation algorithm to reproduce colors faithfully. It also supports automatic white balance (AWB).
- Compatible with GigE Vision Protocol (V1.2) and third-party software.

Note: The functions in this manual are for reference only and may differ from the devices.

1.3 Specifications


1.3.1 MV-CA003-30GM/GC Specification

Table 1-1 MV-CA003-30GM/GC Specification


Model	MV-CA003-30GM	MV-CA003-30GC
Parameters	0.3 MP 1/3" CMOS Machine Vision GigE Camera	
Camera		
Sensor Type	MT9V034	
Sensor Size	1/3"	
Resolution	752×480	
Pixel Size	6 μm	
Frame Rate	60fps	
Dynamic Range	>52dB	
SNR	>37dB	
Gain	0-22dB	
Exposure Time	32μs-1sec	
Shutter Mode	Global shutter, supporting Auto, Manual, One-Push, etc. exposure modes.	
Data Interface	Gigabit Ethernet	
Digital I/O	Opto-isolated input x 1 Opto-isolated output x 1 Bi-directional non-isolated I/O x 1	
Image Buffer	128MB	
Data Format	Mono 8/10/10p/12/12p	Mono 8/10/12 Bayer BG 8/10/10p/12/12p YUV 422 8, YUV 422 8 UYVY RGB8
General		
Power Supply and Consumption	<2.5W@12VDC or PoE, voltage 5 to 15V	
Temperature	Working Temperature 0°C to 50°C, Storage Temperature -30°C to 70°C	
Dimension	29mm×29mm×42mm	
Weight	≈68g	

Lens Mount	C-Mount
Control Client	MVS or third-party client software which supports GigE Vision protocol
OS	Windows XP/7/8 32/64bits
Compatibility	GigE Vision
Certifications	CE, FCC, and RoHS

1.3.2 MV-CA003-30GM/GC Response Curve

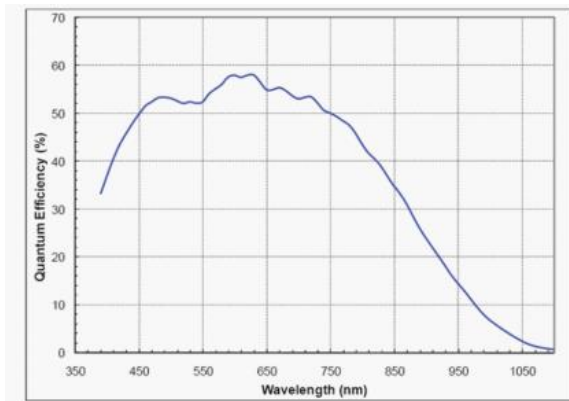

MV-CA003-30GM Quantum Efficiency

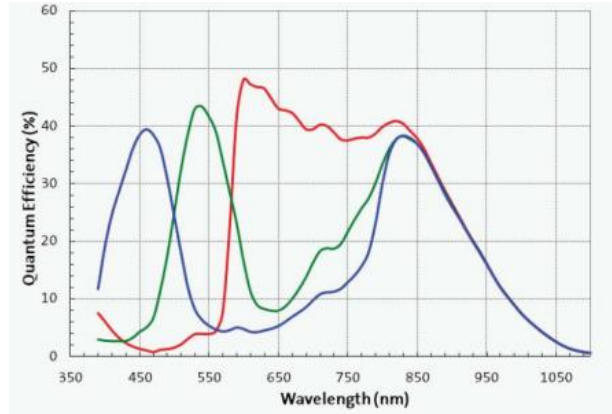

MV-CA003-30GC Quantum Efficiency

Figure 1-1 MV-CA003-30GM/GC Response Curve

Note: The response curve data is provided by the chip manufacturer.

1.3.3 MV-CA013-20GM/GC Specification

Table 1-2 Specification of MV-CA013-20GM

Model	MV-CA013-20GM	MV-CA013-20GC
Parameters	1.3 MP 1/2" CMOS Machine Vision GigE Camera	
Camera		
Sensor Type	PYTHON 1300	
Sensor Size	1/2"	
Resolution	1280×1024	
Pixel Size	4.8μm	
Frame Rate	90fps	
Dynamic Range	>60dB	

SNR	>40dB	
Gain	0-15dB	
Exposure Time	10 μ s-10sec	
Shutter Mode	Global shutter, supporting Auto, Manual, One-Push, etc. exposure modes.	
Data Interface	Gigabit Ethernet	
Digital I/O	Opto-isolated input x 1 Opto-isolated output x 1 Bi-directional non-isolated I/O x 1	
Image Buffer	128MB	
Data Format	Mono 8/10/10p/12/12p	Mono 8/10/12 Bayer BG 8/10/10p/12/12p YUV 422 8, YUV 422 8 UYVY RGB8
General		
Power Supply and Consumption	<2.6W@12VDC or PoE, voltage 5 to 15V	
Temperature	Working Temperature 0°C to 50°C, Storage Temperature -30°C to 70°C	
Dimension	29mm×29mm×42mm	
Weight	≈90g	
Lens Mount	C-Mount	
Control Client	MVS or the third-party client software which supports GigE Vision protocol	
OS	Windows XP/7/8 32/64bits	
Compatibility	GigE Vision V1.2	
Certifications	CE, FCC, and RoHS	

1.3.4 MV-CA013-20GM/GC Response Curve

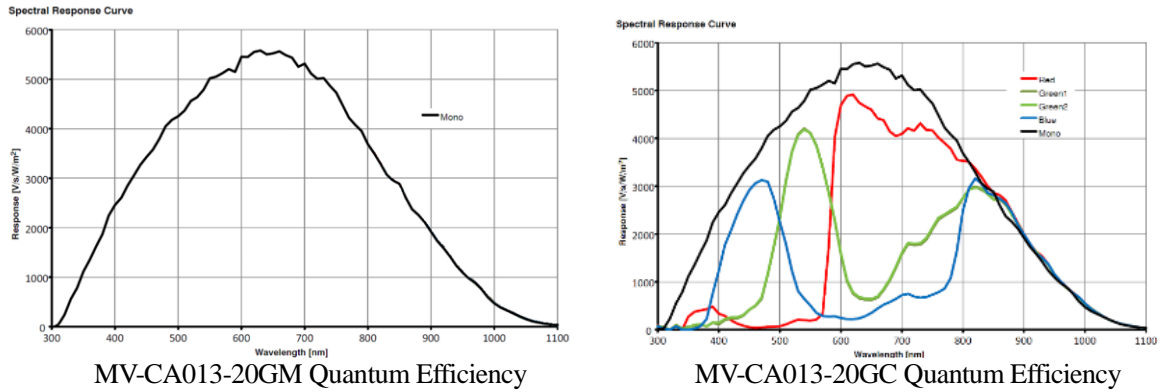


Figure 1-2 MV-CA013-20GM/GC Response Curve


Note: The response curve data is provided by the chip manufacturer.

1.3.5 MV-CA013-30GM/GC Specification


Model	MV-CA013-30GM	MV-CA013-30GC
Parameter	1.3MP 1/3" CMOS Machine Vision GigE Camera	
Camera		
Sensor Type	AR0134	
Sensor Size	1/3"	
Resolution	1280×960	
Pixel Size	3.75µm	
Frame Rate	53fps	
Dynamic Range	>60dB	
SNR	>37dB	
Gain	0-15dB	
Exposure Time	19µs-1sec	
Shutter Mode	Global shutter, supporting Auto, Manual, One-Push, etc. exposure modes.	
Data Interface	Gigabit Ethernet	
Digital I/O	Opto-isolated input x 1 Opto-isolated output x 1 Bi-directional non-isolated I/O x 1	

Image Buffer	128MB	
Data Format	Mono 8/10/10p/12/12p	Mono8/10/12 Bayer GR 8/10/10p/12/12p YUV422 8 YUV 422 8 UYVY RGB8
General		
Power Supply and Consumption	<2.5W@12VDC or PoE, voltage 5 to 15V	
Temperature	Working Temperature 0°C to 50°C, Storage Temperature -30°C to 70°C	
Dimension	29mm×29mm×42mm	
Weight	≈68g	
Lens Mount	C-Mount	
Control Client	MVS or the third-party client software which supports GigE Vision protocol	
OS	Windows XP/7/8 32/64bits	
Compatibility	GigE Vision	
Certifications	CE, FCC, RoHS	

1.3.6 MV-CA013-30GM/GC Response Curve

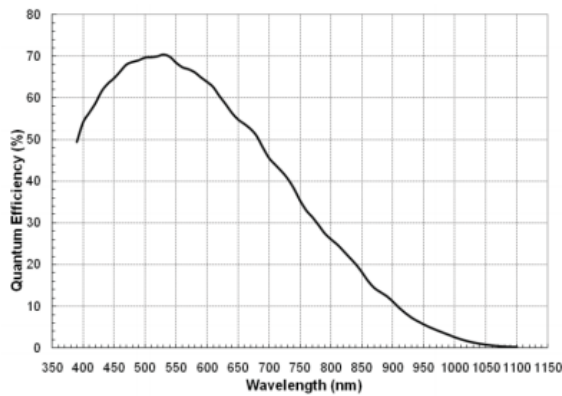

MV-CA013-30GM Quantum Efficiency

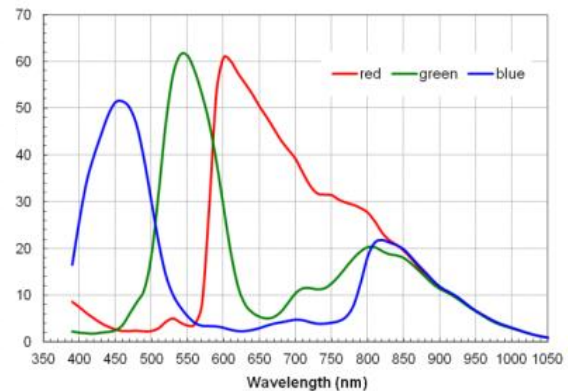

MV-CA013-30GC Quantum Efficiency

Figure 1-3 MV-CA013-30GM/GC Response Curve

Note: The response curve data is provided by the chip manufacturer.

1.3.7 MV-CA030-10GM/GC Specification

Table 1-3 Specification of MV-CA030-10GM/GC

Model	MV-CA030-10GM	MV-CA013-30GC
Parameters	3 MP 1/1.8" CCD Machine Vision GigE Camera	
Camera		
Sensor Type	ICX687	
Sensor Size	1/1.8"	
Resolution	1920×1440	
Pixel Size	3.69 μm	
Frame Rate	25fps	
Dynamic Range	>61dB	
SNR	>40dB	
Gain	0-20dB	
Exposure Time	26μs-10sec	
Shutter Mode	Global shutter, supporting Auto, Manual, One-Push, etc. exposure modes.	
Data Interface	Gigabit Ethernet	
Digital I/O	Opto-isolated input x 1 Opto-isolated output x 1	
Image Buffer	128MB	
Data Format	Mono 8/10/10p/12/12p	Mono8/10/12 Bayer GB 8/10/10p/12/12p YUV422 8, YUV422 8 UYVY RGB8
General		
Power Supply and Consumption	<4W@12VDC or PoE	
Temperature	Working Temperature 0°C to 50°C, Storage Temperature -30°C to 70°C	
Dimension	44mm×29mm×60mm	
Weight	≈86g	
Lens Mount	C-Mount	
Control Client	MVS or the third-party client software which supports GigE Vision protocol	
OS	Windows XP/7/8 32/64bits	
Compatibility	GigE Vision	

Certifications	CE, FCC, and RoHS
----------------	-------------------

1.3.8 MV-CA030-10GM/GC Response Curve

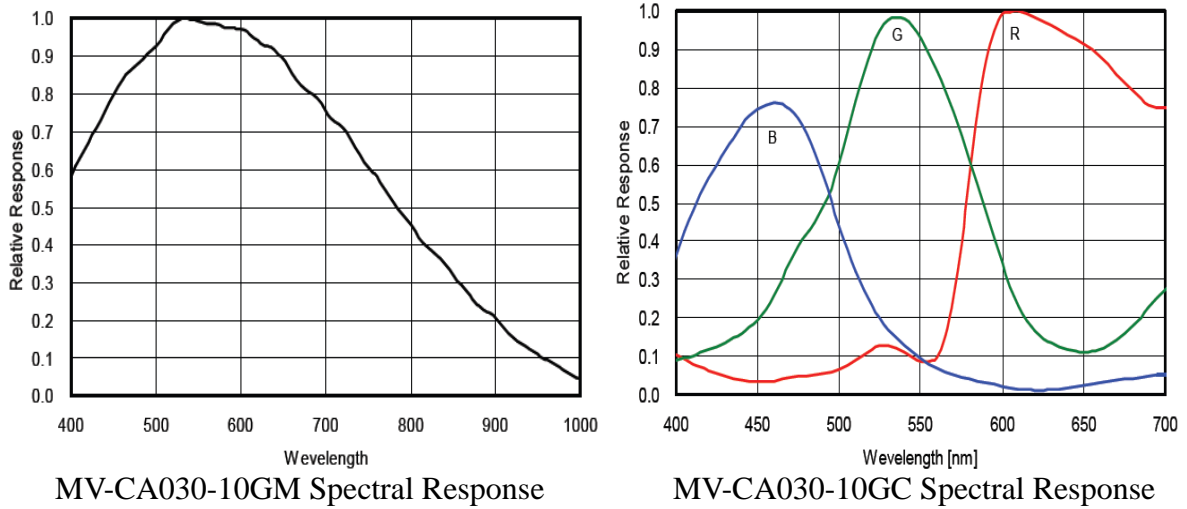


Figure 1-4 MV-CA030-10GM/GC Response Curve

Note: The response curve data is provided by the chip manufacturer.

1.3.9 MV-CA050-20GM/GC Specification

Table 1-4 Specification of MV-CA050-20GM/GC

Model	MV-CA050-20GM	MV-CA050-20GC
Parameters	5MP 1" CMOS Machine Vision GigE Camera	
Camera		
Sensor Type	PYTHON 5000	
Sensor Size	1"	
Resolution	2592×2048	
Pixel Size	4.8μm	
Frame Rate	22fps	
Dynamic Range	>60dB	
SNR	>40dB	

Gain	0-15dB	0-10dB
Exposure Time	10μs-10sec	
Shutter Mode	Global shutter, supporting Auto, Manual, One-Push, etc. exposure modes.	
Data Interface	Gigabit Ethernet	
Digital I/O	Opto-isolated input x 1 Opto-isolated output x 1 Bi-directional non-isolated I/O x 1	
Image Buffer	128MB	
Data Format	Mono 8/10/10p/12/12p	Mono8/10/12 Bayer BG 8/10/10p/12/12p YUV422 8, YUV422 8 UYVY RGB8
General		
Power Supply and Consumption	<3.3W@12VDC or PoE, voltage 5 to 15V	
Temperature	Working Temperature 0°C to 50°C, Storage Temperature -30°C to 70°C	
Dimension	29mm×29mm×42mm	
Weight	≈68g	
Lens Mount	C-Mount	
Control Client	MVS or the third-party client software which supports GigE Vision protocol	
OS	Windows XP/7/8 32/64bits	
Compatibility	GigE Vision	
Certifications	CE, FCC, and RoHS	

1.3.10 MV-CA050-20GM/GC Response Curve

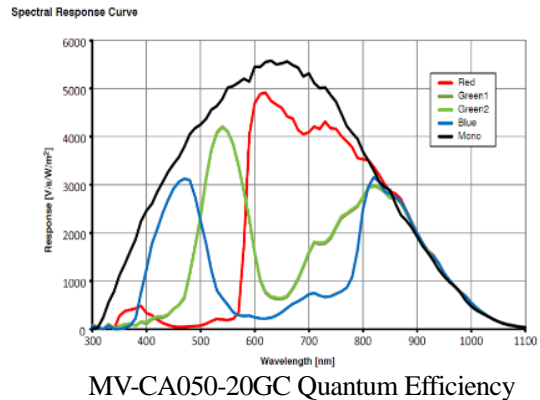
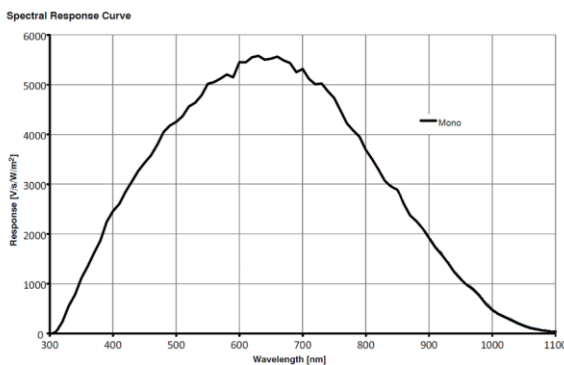


Figure 1-5 MV-CA050-20GM/GC Response Curve

Note: The response curve data is provided by the chip manufacturer.

1.3.11 MV-CA060-10GC Specification

Table 1-5 Specification of MV-CA060-10GC

Model	MV-CA060-10GC
Parameters	6MP 1/1.8" CMOS Machine Vision GigE Camera
Camera	
Sensor Type	IMX178
Sensor Size	1/1.8"
Resolution	3072×2048
Pixel Size	4.8 μm
Frame Rate	17fps
Dynamic Range	>65dB
SNR	>40dB
Gain	0-20dB
Exposure Time	27μs-2.5sec
Shutter Mode	Rolling shutter, supporting Auto, Manual, One-Push, etc. exposure modes.
Data Interface	Gigabit Ethernet
Digital I/O	Opto-isolated input x 1 Opto-isolated output x 1 Bi-directional non-isolated I/O x 1
Image Buffer	128MB
Data Format	Mono8/10/12 Bayer RG 8/10/10p/12/12p YUV422 8, YUV 422 8 UYVY RGB8
General	
Power Supply and Consumption	<3.5W@12VDC or PoE, voltage 5 to 15V
Temperature	Working Temperature 0°C to 50°C, Storage Temperature -30°C to 70°C
Dimension	29mm×29mm×42mm
Weight	≈68g

Lens Mount	C-Mount
Control Client	MVS or the third-party client software which supports GigE Vision protocol
OS	Windows XP/7/8 32/64bits
Compatibility	GigE Vision
Certifications	CE, FCC, RoHS

1.3.12 MV-CA060-10GC Response Curve

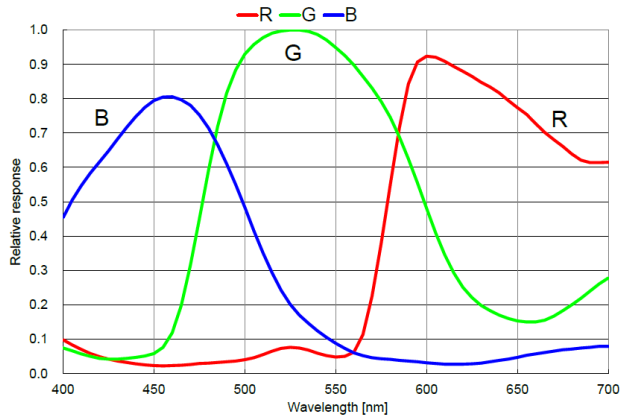


Figure 1-6 MV-CA060-10GC Response Curve

Note: The response curve data is provided by the chip manufacturer.

1.3.13 MV-CA060-11GM Specification

Table 1-6 MV-CA060-11GM Specification

Model Parameters	MV-CA060-11GM
	6 MP 1/3" CMOS Machine Vision GigE Camera
Camera	
Sensor Type	IMX178
Sensor Size	1/1.8"
Resolution	3072×2048
Pixel Size	2.4μm
Frame Rate	17fps
Dynamic Range	>65dB
SNR	>40dB

Gain	0-20dB
Exposure Time	27 μ s-2.5sec
Shutter Mode	rolling shutter, supporting Auto, Manual, One-Push, etc. exposure modes.
Data Interface	Gigabit Ethernet
Digital I/O	Opto-isolated input x 1 Opto-isolated output x 1 Bi-directional non-isolated I/O x 1
Image Buffer	128MB
Data Format	Mono 8/10/10p/12/12p
General	
Power Supply and Consumption	<3.5W@12VDC or PoE, voltage 5 to 15V
Temperature	Working Temperature 0°C to 50°C, Storage Temperature -30°C to 70°C
Dimension	29mm×29mm×42mm
Weight	≈68g
Lens Mount	C-Mount
Control Client	MVS or the third-party client software which supports GigE Vision protocol
OS	Windows XP/7/8 32/64bits
Compatibility	GigE Vision
Certifications	CE, FCC, RoHS

1.3.14 MV-CA060-11GM Response Curve

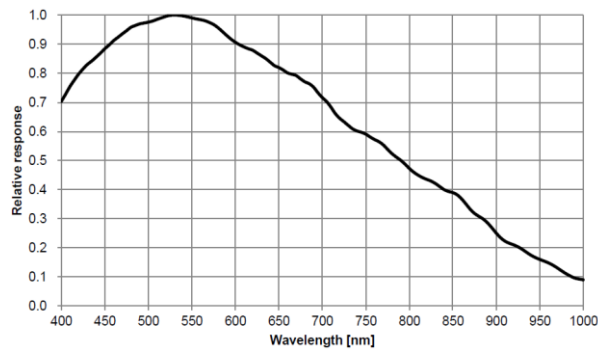


Figure 1-7 MV-CA060-11GM Response Curve

Note: The response curve data is provided by the chip manufacturer.


1.3.15 MV-CA003-50GM/GC Specification

Table 1-7 MV-CA003-50GM/GC Specification


Model	MV-CA003-50GM	MV-CA003-50GC
Parameters	0.3 MP 1/3" CCD Machine Vision GigE Camera	
Camera		
Sensor Type	RJ33B4AD0DT	
Sensor Size	1/3"	
Resolution	640×480	
Pixel Size	7.4μm	
Frame Rate	200fps@	
Dynamic Range	>52dB	
SNR	>37dB	
Gain	0-20dB	
Exposure Time	20μs-1sec	
Shutter Mode	Global shutter, supporting Auto, Manual, One-Push, etc. exposure modes.	
Data Interface	Gigabit Ethernet	
Digital I/O	Opto-isolated input x 1 Opto-isolated output x 1 Bi-directional non-isolated I/O x 1	
Image Buffer	128MB	
Data Format	Mono 8/10/10p/12/12p	Mono 8/10/12 Bayer GB 8/10/10p/12/12p YUV 422 8, YUV 422 8 UYVY RGB8
General		
Power Supply and Consumption	≈3.6W@12VDC or PoE, voltage 5 to 15V	
Temperature	Working Temperature 0°C to 50°C, Storage Temperature -30°C to 70°C	
Dimension	29mm×29mm×42mm	
Weight	≈68g	
Lens Mount	C-Mount	
Control Client	MVS or the third-party client software which supports GigE Vision protocol	
OS	Windows XP/7/8 32/64bits	

Compatibility	GigE Vision
Certifications	CE, FCC, RoHS

1.3.16 MV-CA003-50GM/GC Response Curve

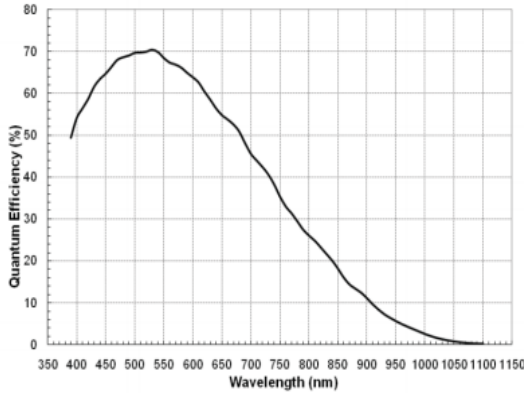

MV-CA003-50GM Quantum Efficiency

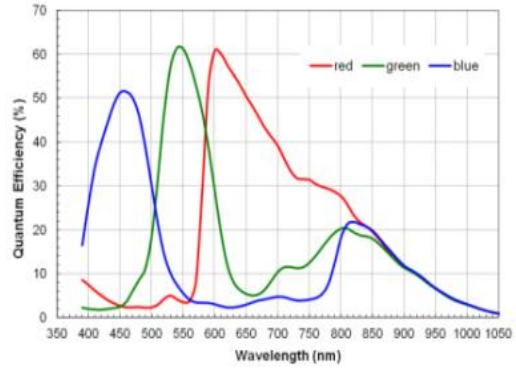

MV-CA003-50GC Quantum Efficiency

Figure 1-8 MV-CA003-50GM/GC Response Curve

Note: The response curve data is provided by the chip manufacturer.


1.3.17 MV-CA023-10GM/GC Specification

Table 1-8 MV-CA023-10GM/GC Specification


Model Parameter	MV-CA023-10GM	MV-CA023-10GC
		2.3 MP 1/1.2" CMOS Machine Vision GigE Camera
Camera		
Sensor Type	IMX249	
Resolution	1920×1200	
Pixel Size	5.86μm	
Frame Rate	30fps	
Dynamic Range	>70dB	
SNR	>40dB	
Gain	0-20dB	
Exposure Time	26μs-0.1sec	
Shutter Mode	Global shutter, supporting Auto, Manual, One-Push, etc. exposure modes.	
Data Interface	Gigabit Ethernet	

Digital I/O	Opto-isolated input x 1 Opto-isolated output x 1 Bi-directional non-isolated I/O x 1	
Image Buffer	128MB	
Data Format	Mono 8/10/10p/12/12p	Mono 8/10/12 Bayer RG 8/10/10p/12/12p YUV 422 8, YUV 422 8 UYVY RGB8
General		
Power Supply and Consumption	≈3W@12VDC or PoE, voltage 5 to 15V	
Temperature	Working Temperature 0°C to 50°C, Storage Temperature -30°C to 70°C	
Dimension	29mm×29mm×42mm	
Weight	≈68g	
Lens Mount	C-Mount	
Control Client	MVS or the third-party client software which supports GigE Vision protocol	
OS	Windows XP/7/8 32/64bits	
Compatibility	GigE Vision	
Certifications	CE, FCC, RoHS	

1.3.18 MV-CA023-10GM/GC Response Curve

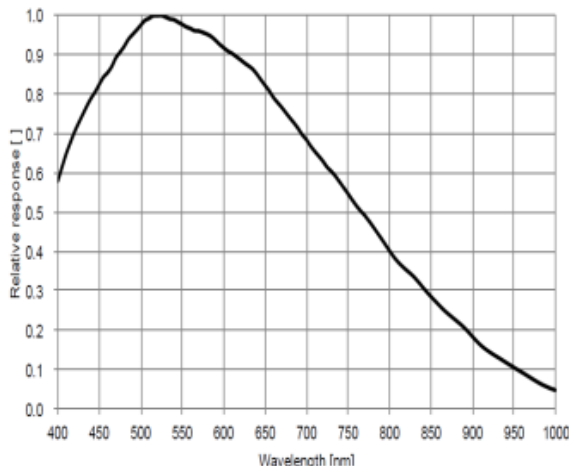

MV-CA023-10GM Quantum Efficiency

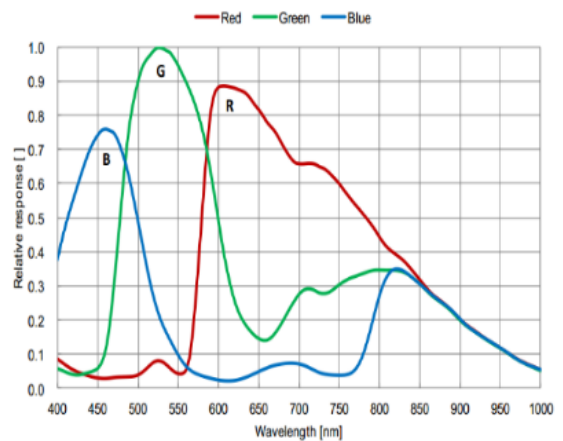

MV-CA023-10GC Quantum Efficiency

Figure 1-9 MV-CA023-10GM/GC Response Curve

Note: The response curve data is provided by the chip manufacturer.


1.3.19 MV-CA050-10GM/GC Specification

Table 1-9 MV-CA050-10GM/GC Specification

Model	MV-CA050-10GM	MV-CA050-10GC
Parameter	5 MP 2/3" CMOS Machine Vision GigE Camera	
Camera		
Sensor Type	IMX264	
Sensor Size	2/3"	
Resolution	2448×2048	
Pixel Size	3.45μm	
Frame Rate	23.5fps	
Dynamic Range	>60dB	
SNR	>40dB	
Gain	0-17dB	
Exposure Time	20μs-10sec	
Shutter Mode	Global shutter, supporting Auto, Manual, One-Push, etc. exposure modes.	
Data Interface	Gigabit Ethernet	
Digital I/O	Opto-isolated input x 1 Opto-isolated output x 1 Bi-directional non-isolated I/O x 1	
Image Buffer	128MB	
Data Format	Mono 8/10/10p/12/12p	Mono 8/10/12 Bayer RG 8/10/10p/12/12p YUV 422 8, YUV 422 8 UYVY RGB8
General		
Power Supply and Consumption	≈3.3W@12VDC or PoE, voltage 5 to 15V	
Temperature	Working Temperature 0°C to 50°C, Storage Temperature -30°C to 70°C	
Dimension	29mm×29mm×42mm	
Weight	≈68g	
Lens Mount	C-Mount	
Control Client	MVS or the third-party client software which supports GigE Vision protocol	
OS	Windows XP/7/8 32/64bits	

Compatibility	GigE Vision
Certifications	CE, FCC, RoHS

1.3.20 MV-CA050-10GM/GC Response Curve

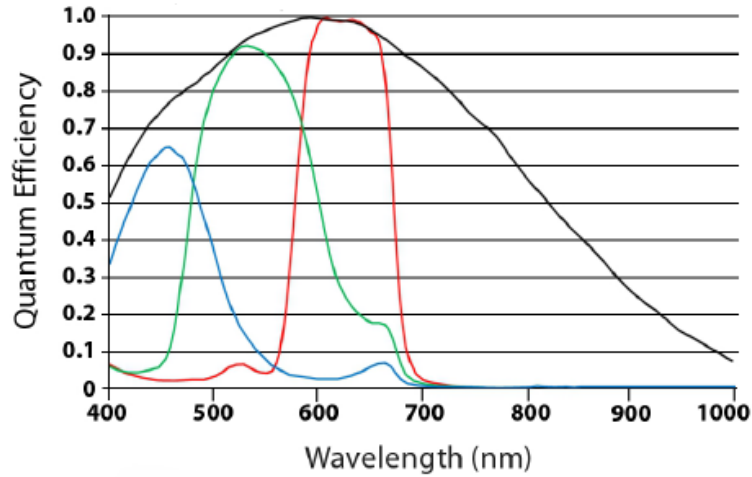

MV-CA050-10GM/GC Quantum Efficiency

Figure 1-10 MV-CA050-10GM/GC Response Curve

Note: The response curve data is provided by the chip manufacturer.


1.3.21 MV-CE100-30GM/GC Specification

Table 1-10 MV-CE100-30GM/GC Specification


Model	MV-CE100-30GM	MV-CE100-50GC
Parameter	10 MP 1/2.3" CMOS Machine Vision GigE Camera	
Camera		
Sensor Type	MT9J003	
Sensor Size	1/2.3"	
Resolution	3840×2748	
Pixel Size	1.67μm	
Frame Rate	7fps	
Dynamic Range	>65dB	
SNR	>34dB	
Gain	0-15.3dB	

Exposure Time	50μs-2sec	
Shutter Mode	rolling shutter , supporting Auto, Manual, One-Push, etc. exposure modes.	
Data Interface	Gigabit Ethernet	
Digital I/O	Opto-isolated input x 1 Opto-isolated output x 1 Bi-directional non-isolated I/O x 1	
Image Buffer	128MB	
Data Format	Mono 8/10/10p/12/12p	Mono 8/10/12 Bayer GR 8/10/10p/12/12p YUV 422 8, YUV 422 8 UYVY RGB8
General		
Power Supply and Consumption	≈2.6W@12VDC or PoE, voltage 5 to 15V	
Temperature	Working Temperature 0°C to 50°C, Storage Temperature -30°C to 70°C	
Dimension	29mm×29mm×42mm	
Weight	≈68g	
Lens Mount	C-Mount	
Control Client	MVS or the third-party client software which supports GigE Vision protocol	
OS	Windows XP/7/8 32/64bits	
Compatibility	GigE Vision	
Certifications	CE, FCC, RoHS	

1.3.22 MV-CE100-30GM/GC Response Curve

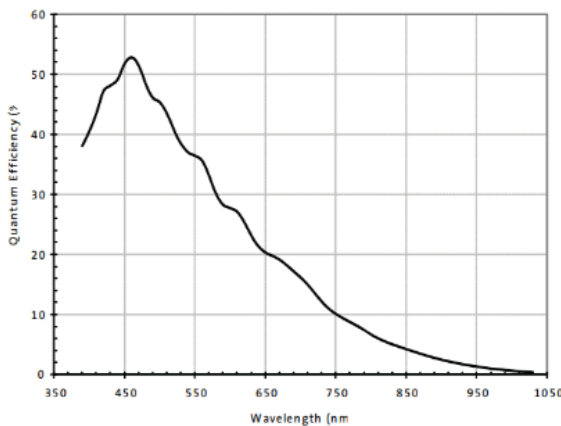

MV-CE100-30GM Quantum Efficiency

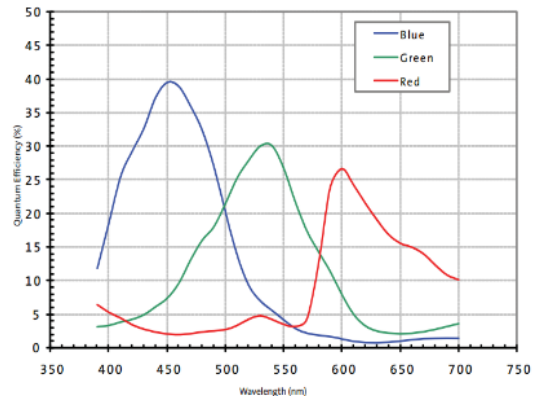

MV-CE100-30GC Quantum Efficiency

Figure 1-11 MV-CE100-30GM/GC Response Curve

Note: The response curve data is provided by the chip manufacturer.


1.3.23 MV-CA003-20GM/GC Specification

Table 1-11 MV-CA003-20GM/GC Specification


Model	MV-CA003-20GM	MV-CA003-20GC
Parameter	0.3 MP 1/4" CMOS Machine Vision GigE Camera	
Camera		
Sensor Type	PYTHON 300	
Sensor Size	1/4"	
Resolution	672×512	
Pixel Size	1.67μm	
Frame Rate	300fps	
Dynamic Range	>60dB	
SNR	>40dB	
Gain	0-15dB	
Exposure Time	10μs-10sec	
Shutter Mode	Global shutter, supporting Auto, Manual, One-Push, etc. exposure modes.	
Data Interface	Gigabit Ethernet	
Digital I/O	Opto-isolated input x 1 Opto-isolated output x 1 Bi-directional non-isolated I/O x 1	
Image Buffer	128MB	
Data Format	Mono 8/10/10p/12/12p	Mono 8/10/12 Bayer RG 8/10/10p/12/12p YUV 422 8, YUV 422 8 UYVY RGB8
General		
Power Supply and Consumption	≈2.6W@12VDC or PoE, voltage 5 to 15V	
Temperature	Working Temperature 0°C to 50°C, Storage Temperature -30°C to 70°C	
Dimension	29mm×29mm×42mm	
Weight	≈68g	
Lens Mount	C-Mount	

Control Client	MVS or the third-party client software which supports GigE Vision protocol
OS	Windows XP/7/8 32/64bits
Compatibility	GigE Vision V1.2
Certifications	CE, FCC, RoHS

1.3.24 MV-CA003-20GM/GC Response Curve

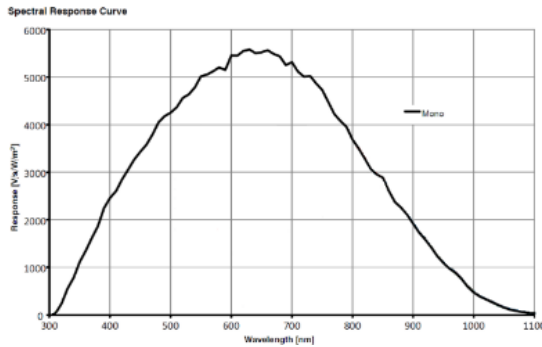

MV-CA003-20GM Quantum Efficiency

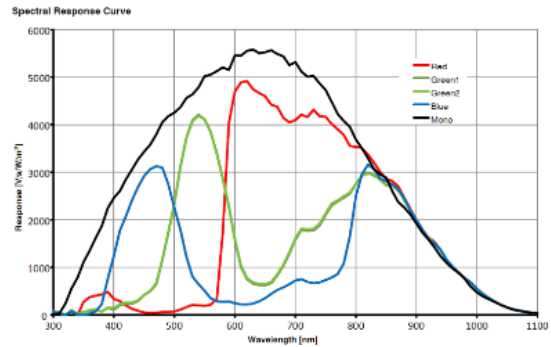

MV-CA003-20GC Quantum Efficiency

Figure 1-12 MV-CA003-20GM/GC Response Curve

Note: The response curve data is provided by the chip manufacturer.


1.3.25 MV-CA013-20GN Specification

Table 1-12 MV-CA013-20GN Specification

Model	MV-CA013-20GN
Parameter	1.3 MP 1/2" CMOS Near-infrared enhanced Machine Vision GigE Camera
Camera	
Sensor Type	PYTHON 1300
Sensor Size	1/2"
Resolution	1280×1024
Pixel Size	4.8µm
Frame Rate	90fps
Dynamic Range	>60dB
SNR	>40dB
Gain	0-15dB
Exposure Time	10µs-10sec

Shutter Mode	Global shutter, supporting Auto, Manual, One-Push, etc. exposure modes.
Data Interface	Gigabit Ethernet
Digital I/O	Opto-isolated input x 1 Opto-isolated output x 1 Bi-directional non-isolated I/O x 1
Image Buffer	128MB
Data Format	Mono 8/10/10p/12/12p
General	
Power Supply and Consumption	≈2.6W@12VDC or PoE, voltage 5 to 15V
Temperature	Working Temperature 0°C to 50°C, Storage Temperature -30°C to 70°C
Dimension	29mm×29mm×42mm
Weight	≈68g
Lens Mount	C-Mount
Control Client	MVS or the third-party client software which supports GigE Vision protocol
OS	Windows XP/7/8 32/64bits
Compatibility	GigE Vision
Certifications	CE, FCC, RoHS

1.3.26 MV-CA013-20GN Response Curve

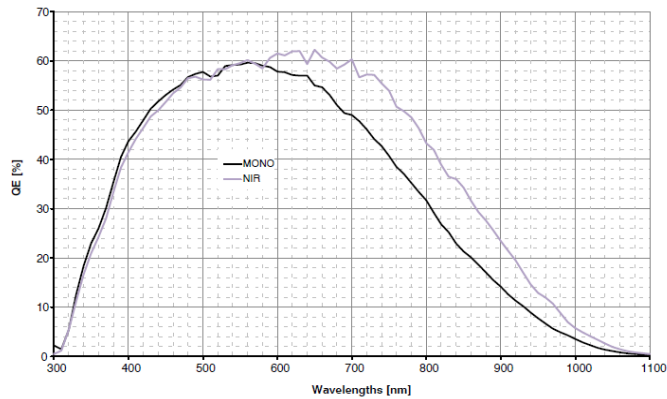

MV-CA013-20GN Quantum Efficiency

Figure 1-13 MV-CA013-20GN Response Curve


Note: The response curve data is provided by the chip manufacturer.

1.3.27 MV-CA050-20GN Specification

Table 1-13 MV-CA050-20GN Specification

Model	MV-CA050-20GN
Parameter	5 MP 1" CMOS Machine Vision GigE Camera
Camera	
Sensor Type	PYTHON 5000
Sensor Size	1"
Resolution	2592×2048
Pixel Size	4.8μm
Frame Rate	22fps
Dynamic Range	>60dB
SNR	>40dB
Gain	0-15dB
Exposure Time	10μs-10sec
Shutter Mode	Global shutter, supporting Auto, Manual, One-Push, etc. exposure modes.
Data Interface	Gigabit Ethernet
Digital I/O	Opto-isolated input x 1 Opto-isolated output x 1 Bi-directional non-isolated I/O x 1
Image Buffer	128MB
Data Format	Mono 8/10/10p/12/12p
General	
Power Supply and Consumption	≈3.3W@12VDC or PoE, voltage 5 to 15V
Temperature	Working Temperature 0°C to 50°C, Storage Temperature -30°C to 70°C
Dimension	29mm×29mm×42mm
Weight	≈68g
Lens Mount	C-Mount
Control Client	MVS or the third-party client software which supports GigE Vision protocol
OS	Windows XP/7/8 32/64bits
Compatibility	GigE Vision
Certifications	CE, FCC, RoHS

1.3.28 MV-CA050-20GN Response Curve

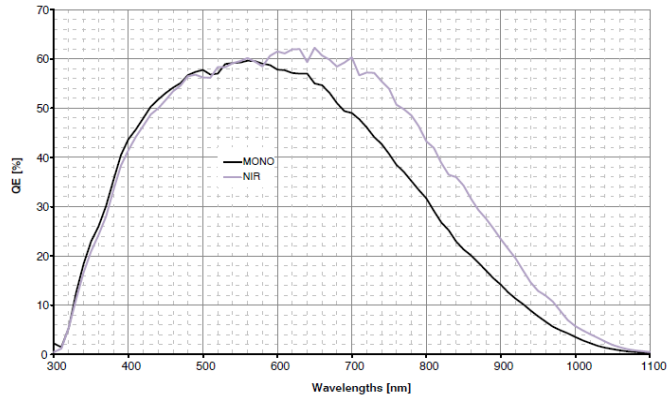

MV-CA050-20GN Quantum Efficiency

Figure 1-14 MV-CA050-20GN Response Curve

Note: The response curve data is provided by the chip manufacturer.

1.4 Camera Physical Interfaces

1.4.1 Camera Dimension

The mechanical dimension of the MV-CA030-10GM/GC is shown below. The camera should be installed with M3*3 screws.

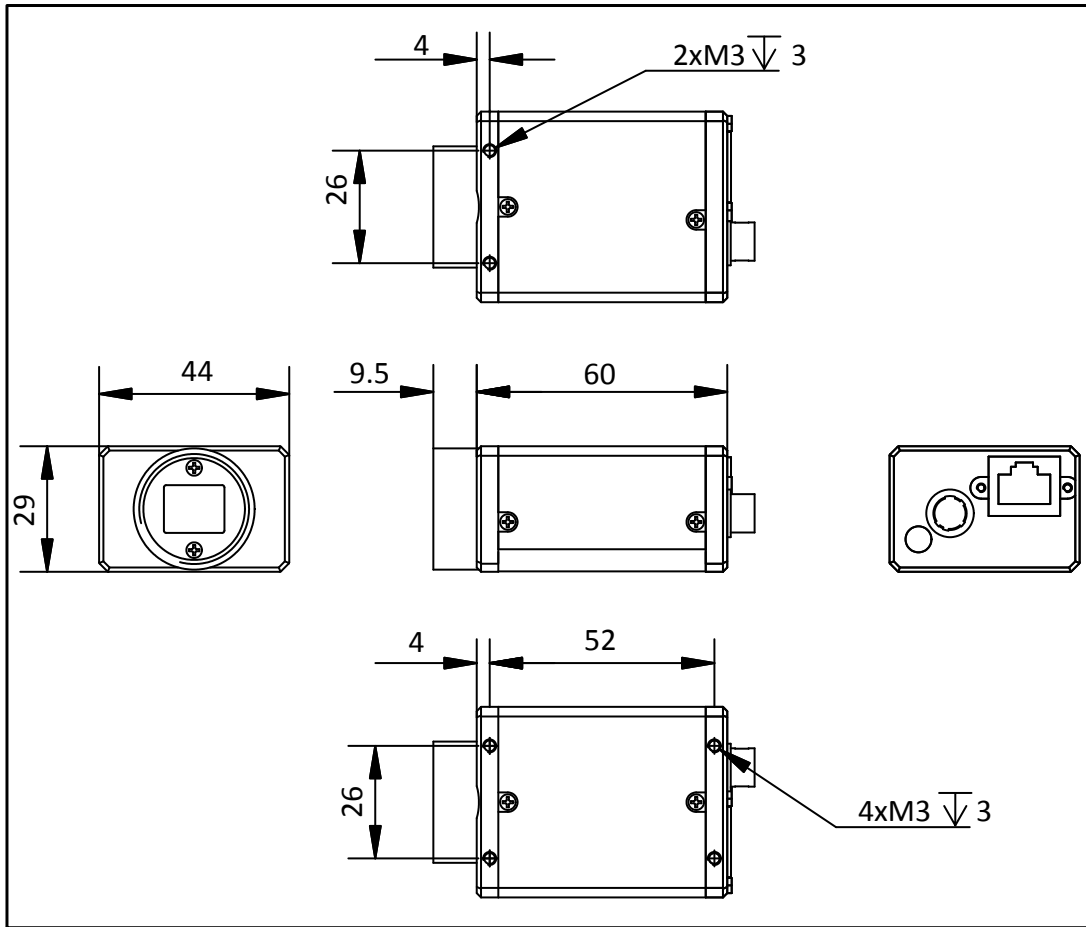


Figure 1-15 Dimension of MV-CA030-10GM/GC

The mechanical dimension of the MV-CA003-30GM/GC, MV-CA013-20GM, MV-CA013-30GM/GC, MV-CA050-20GM, MV-CA060-10GM/GC is shown below. The camera should be installed with M3*3 or M2*3 screws.

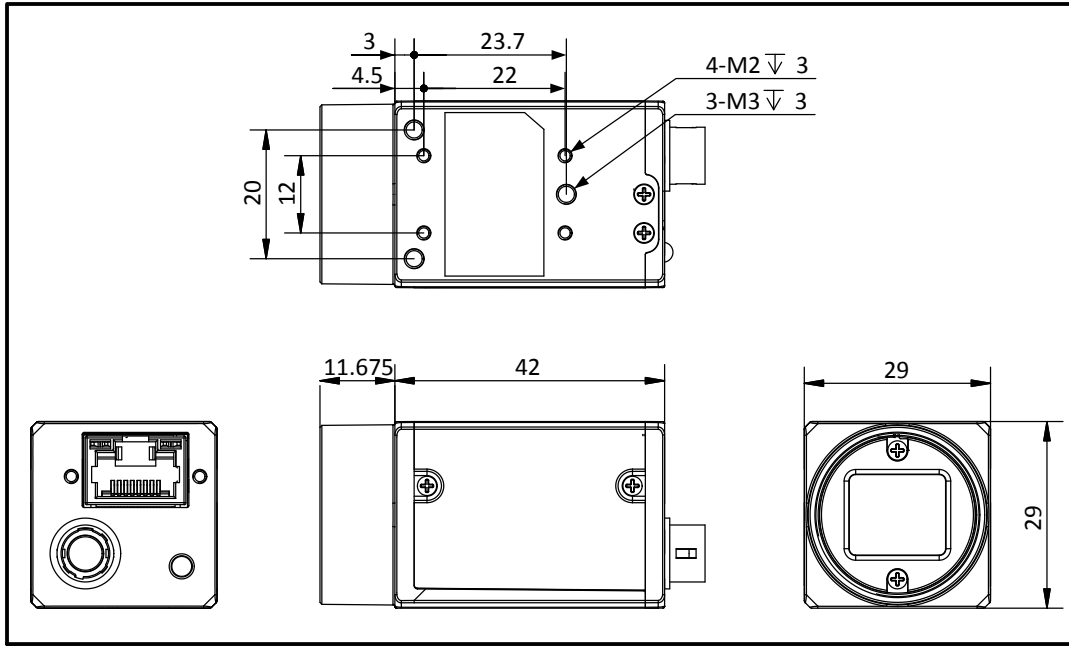



Figure 1-16 Dimension of Other Models

Note: The camera adopts the C-Mount lens interface. The flange back length of lens is $17.5\text{mm}\pm 0.15\text{mm}$.

1.4.2 Rear Panel Introduction

The rear panel of the machine vision camera is shown in the figure below.

Type I

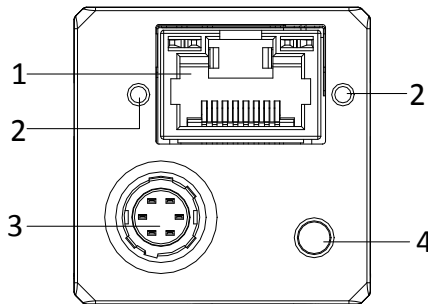

Type II

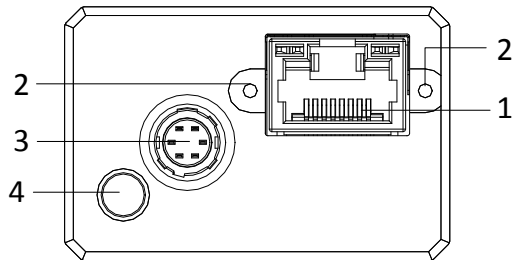


Figure 1-17 Rear Panel

Table 1-14 Description of the Rear Panel

No.	Description
1	RJ45 gigabit Ethernet interface
2	M2 screw holes for network cable securing
3	6-pin power and I/O interface
4	Status indicator LED

1.4.3 Power and I/O Interface Introduction

The description of the 6-pin power and I/O connector is shown in the table below.

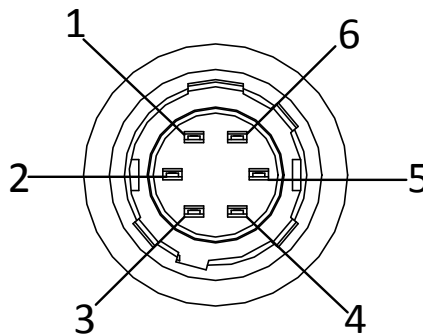


Figure 1-18 Power and I/O Interface

Table 1-15 Description

No.	Signal	I/O Type	Description
1	12V	Input	DC 12V
2	Opt-Iso In	Input	Opto-isolated input
3	GPIO	Input/output	Can be configured as input or output
4	Opt-Iso Out	Output	Opto-isolated output
5	I/O Ground	Input	Opt- isolated I/O grounding
6	GND	Input	Power and GPIO grounding

For the MV-CA030-10GM/GC camera, Pin3 is in the Not Connect status.

1.4.4 Installation Accessories

Prepare the installation accessories listed below before you install the machine vision camera.

Table 1-16 Accessory List

No.	Accessory Name	Number	Description
1	Camera	1	The machine vision camera.
2	Power I/O cable	1	The 6-pin cable (included) or extension cable (not included).
3	Power adapter	1	12V DC power adapter (Min. 1A)
4	Ethernet cable with proper length	1	CAT-5e or CAT-6 Ethernet cable
5	Lens (Optional)	1	C-Mount Lens
6	Mounting Bracket (Optional)	1	The mounting bracket has four M2 holes and one 1/4-32UNF interface.

Chapter 2 Camera Installation and Configuration

2.1 Installing the Camera

Steps:

1. Unpack the camera package and install the lens (optional) to the camera body by rotating the lens clockwise.
2. Fix the camera to the desired position.
3. Use CAT-5e or CAT-6 network cable to connect the camera with a switch or a network card.
4. Choose a power supply method.
 - Direct supply: Use the supplied cord with a 6-pin power and I/O interface to connect the camera to a power adapter (DC 12V for the camera).
 - PoE (Power over Ethernet): Use a network cable to connect the camera to a switch or a network card that supports PoE function.

Note: The machine vision network camera adopts a gigabit network interface. To guarantee the bandwidth for real-time image transmission, you need to use a CAT-5e or CAT-6 network cable.

2.2 Network Configuration

Purpose:

Before using the camera, you need to configure the IP address of the camera. The IP addresses of the camera and the local computer should belong to the same network segment. You can use the ping command on the local computer to test the network connectivity.

Before you start:

Download the MVS control client from the website and install it on your PC. Refer to

the *User Manual of MVS Client Software* for details.

2.2.1 Local Network Configuration

Steps:

1. Click Start -> Control Panel -> Network and Internet -> Network and Sharing Center -> Change adapter settings, select the network connection and click Properties.
2. Double click the TCP protocol, and you can set select **Obtain an IP address automatically**.
3. (Optional) You can also select **Use the following IP address**, and set the IP address as the same subnet with the camera.

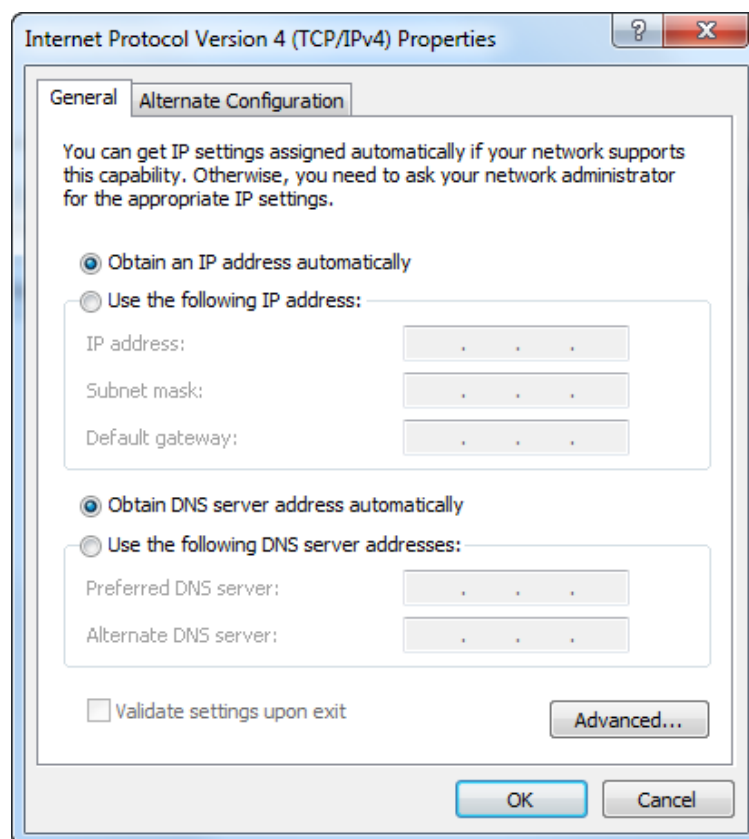


Figure 2-1 IP Address Setting

4. Click **OK** to save the settings.
5. You also need to enable the jumbo frame of the NIC. For different operating

systems, the path to setting the jumbo frame may be different. Here we take Windows 7 as an example.

- 1) Click Start -> Control Panel -> Hardware and Sound -> Device Manager -> Network adapters, double click the NIC to enter its properties interface.
- 2) Click **Advanced** tab.
- 3) Select **Jumbo Frame** from the property list and select the value as **9KB MTU**.
- 4) Click **OK** to save the settings.

Note: Jumbo frame is not supported by some types of NIC. We recommend you to use the NIC which supports jumbo frame for better image transmission.

2.2.2 Camera IP Configuration

You can use the client software to complete network configuration for the camera.

Steps:

1. Double click the “MVS IP Configurator.exe” to open the configuration tool.
You can find the tool in the installation directory.
2. Select the camera to configure.

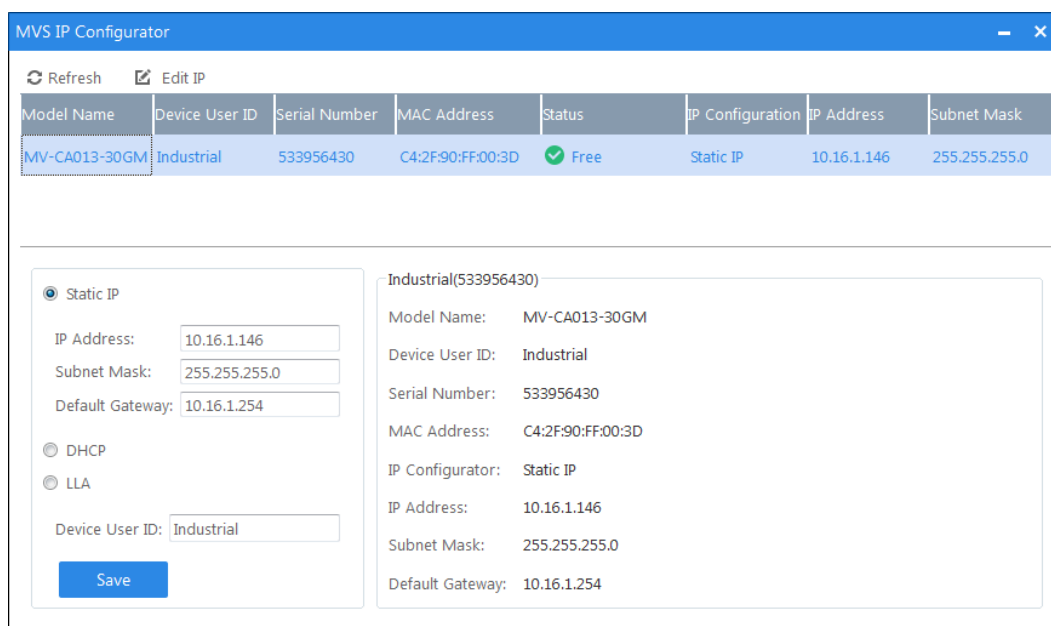



Figure 2-2 Camera Network Parameters Setting (1)

3. You can view the camera status and modify the settings.
 - If the camera status is Free, the camera is available and you can edit its IP address.
 - If the camera status is In Use, it means the client software or other processes are accessing the camera. You need to stop the live view and disconnect the camera, or terminate other processes to access the camera.
 - If the camera status is Not Reachable, the network of the camera is exceptional and you should check the camera network settings.

Note: The camera status may be **In Use** if the camera IP address is conflicted with other device. Please make sure the IP address is not occupied before setting the camera IP address.

4. If the camera status is Free, you can edit its IP address.

- 1) Select the IP type as Static IP, DHCP, or LLA.

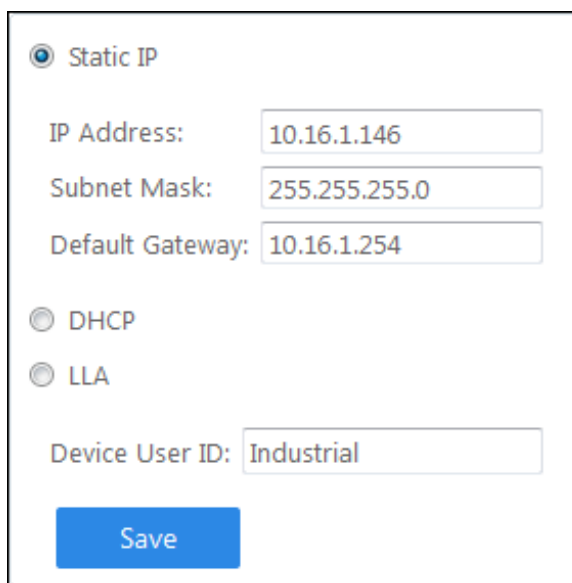


The screenshot shows a configuration window for network parameters. It has three radio buttons: 'Static IP' (selected), 'DHCP', and 'LLA'. Below the radio buttons are three text input fields: 'IP Address' with the value '10.16.1.146', 'Subnet Mask' with '255.255.255.0', and 'Default Gateway' with '10.16.1.254'. At the bottom, there is a 'Device User ID' field with the value 'Industrial' and a blue 'Save' button.

Figure 2-3 Camera Network Parameters Setting (2)

If you set the IP type as Static IP, you can set the IP address, subnet mask, and default gateway.

You can also edit the the camera name in Device User ID field.

Click Save to save the settings.

- 2) Select the camera to be edited and click  button.

- 3) In the pop-up window, you can edit the IP address of the camera. For Static IP type, you can also edit the subnet mask and default gateway.

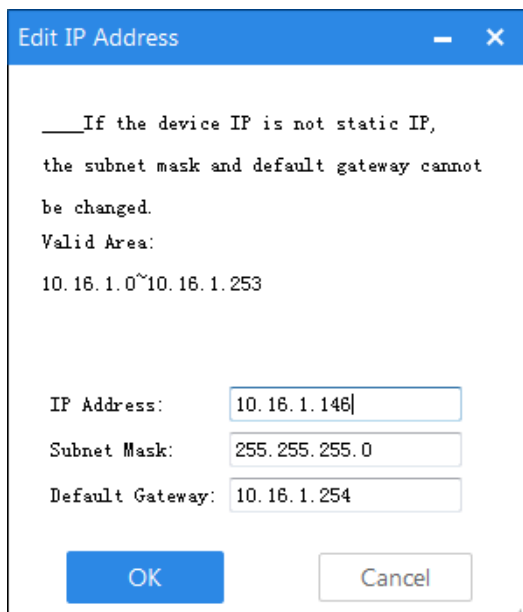


Figure 2-4 Camera Network Parameters Setting (3)

- 4) Click **OK** to save the settings.

2.3 Camera Configuration

Note: Configure the camera via the control client. There two methods available: setting via the attribute tree or via the menu bar.

2.3.1 Setting via Attribute Tree

The software can read the XML file of camera attributes and display it in tree format.

Steps:

1. Double click the MVS icon to open the client software. The main user interface and the description of the client software are shown in Figure 2-5 and Table 2-1.



Figure 2-5 Main User Interface of the Client Software

Table 2-1 Description of the Main User Interface

No.	Area Name	Description
1	Menu Bar	Function modules including File, View, Camera, Settings, Tools, and Help.
2	Control Toolbar	Control the image of live view including starting/stopping live view, zooming in/out, recording, capturing, etc.
3	Device and Attribute Tree	Display the online machine vision cameras in the same LAN with the client software and the device attributes.
4	User Level Area	Switch the user level quickly as beginner, expert or guru.
5	Live View Area	View the live video of the selected machine vision camera.

Note: For detailed information, refer the *User Manual of MVS Control Client*.

2. Double click the camera on the device list in Device and Attribute Tree area.
3. Click the **Attributes** tab to enter the camera attribute page.

Note: You can switch the user level as Beginner, Expert or Guru which displays

different camera attributes. For Guru Level, it provides the most comprehensive camera attributes for professional use. Here we take Guru Level as an example.

4. Click the  icon before each attribute to view and edit the details.

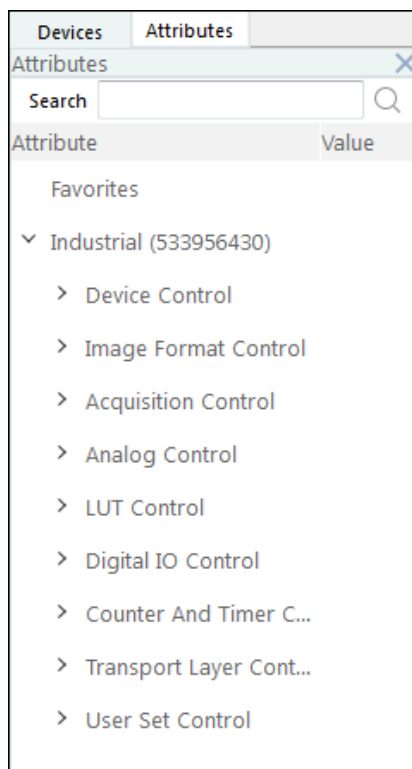


Figure 2-6 Attribute Page

- Device Control: In the Device Control attribute, you can view the camera details include device type, version, manufacturer details, device ID, device alias, device temperature, etc. You can modify the alias and reset the device.
- Image Format Control: In the Image Format Control attribute, you can view the live view image width and height, pixel size, etc. You can modify the image reverse status, test pattern and the embedded information, etc.
- Acquisition Control: In the Acquisition Control attribute, you can set the trigger mode, trigger source, exposure details, etc.
- Analog Control: In the Analog Control attribute, you can adjust analog gain, black level, brightness, gamma, sharpness, AOI, etc.
- LUT Control: In the LUT Control attribute, you can view the user lookup table and set the LUT index and value.

- **Digital IO Control:** In the Digital IO Control attribute, you can manage the digital input and output.
- **Counter and Timer Control:** In the Counter and Timer Control attribute, you can set the counter and timer function. It can count the triggering signal and control the exposure according to the user needs.
- **Transport Layer Control:** In the Transport Layer Control attribute, you can set the parameters of transport layer of the camera.
- **User Set Control:** In the User Set Control attribute, you can save or load the parameter configuration set by users. You can set the default parameter when running the software.

2.3.2 Setting via Menu Bar

You can set the camera attribute via the menu bar which classifies the camera attributes.

Click **Settings -> Attributes** to enter the attributes setting interface.

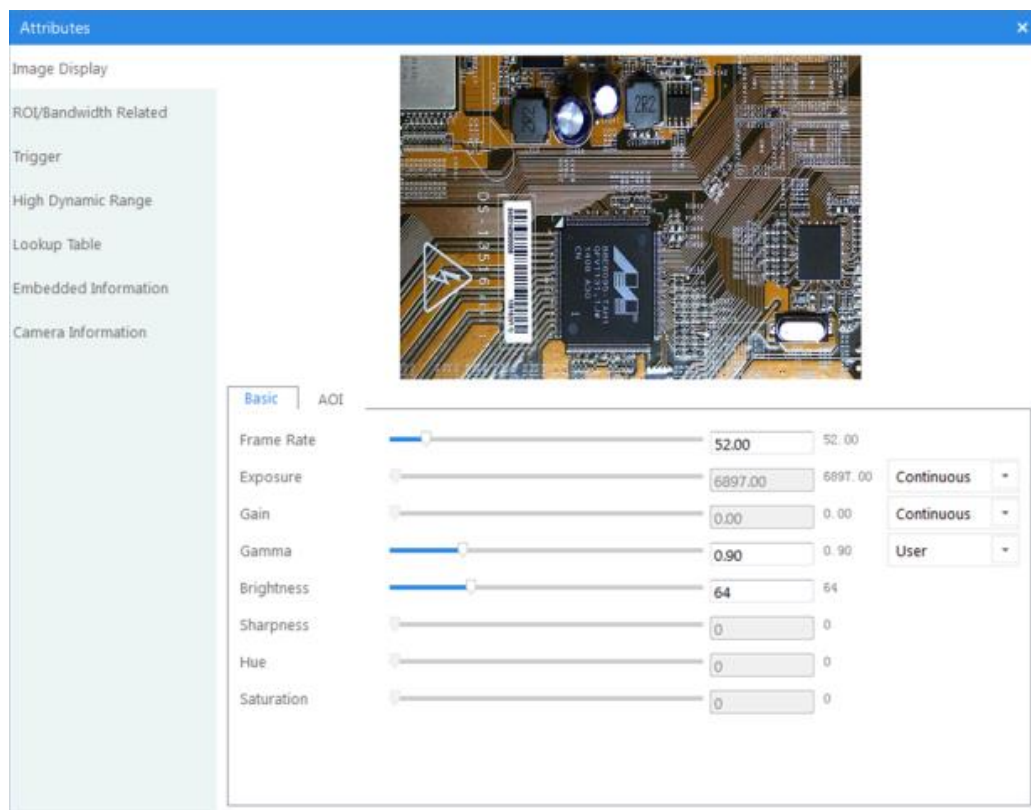


Figure 2-7 Setting via Menu Bar

You can set the image display, ROI, bandwidth, trigger mode, high dynamic range, lookup table, embedded information and camera information.


Note: Functions and Attributes of machine vision cameras may be different among different camera models. Refer to the actual user interface and the user manual of the camera for detailed information.

Chapter 3 Functions

3.1 Device Control

3.1.1 Name Modification

Run client software and click Device Control. You will see the device type, the version information, the device serial number and so on. Input the device name in Device User ID as shown in Figure 3-1.

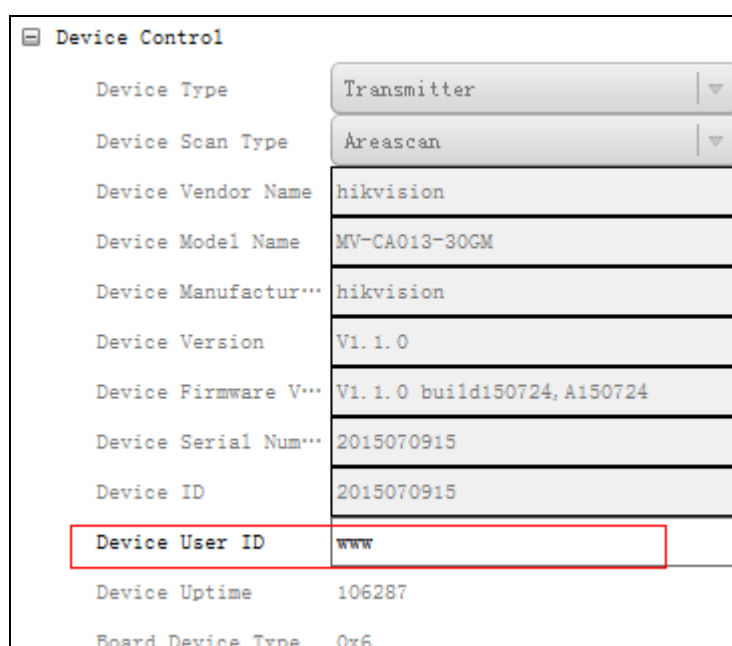

Device Control	
Device Type	Transmitter
Device Scan Type	Areascan
Device Vendor Name	hikvision
Device Model Name	MV-CA013-30GM
Device Manufactur...	hikvision
Device Version	V1.1.0
Device Firmware V...	V1.1.0 build150724, A150724
Device Serial Num...	2015070915
Device ID	2015070915
Device User ID	www
Device Uptime	106287
Board Device Type	0x6

Figure 3-1 Device Name Modification

You can turn on the heartbeat detection mechanism, reset the device and view the device temperature in Device Control, as shown in Figure 3-2.

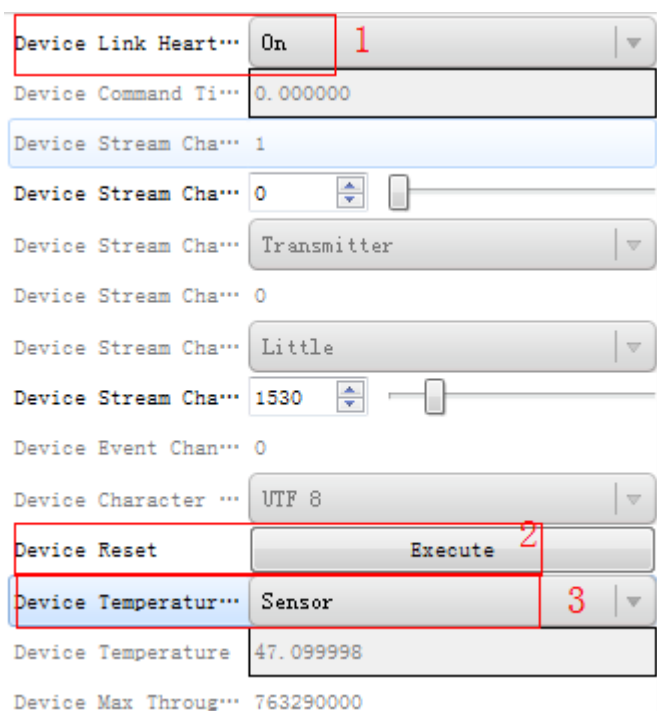


Figure 3-2 Device Information

3.2 Image Format and Frame Rate

Support different image format and customized ROI setting. The specified ROI will increase the image frame rate in some models.

Note: The following figures are for reference only. The actual format depends on the camera's supported formats.

3.2.1 Camera Data Format

The supporting pixel format of MV-CA camera is shown in Table 3-1.

Table 3-1 Data Format Table

Format	Mono8	Mono 10/10p	Mono12/12p	RGB 8	Bayer 8	Bayer 10/10p	Bayer 12/12p	YUV 422	YUV 422 (UYVY)
MV-CA003-30GM	Y	Y	---	---	---	---	---	---	---
MV-CA003-30GC	Y	---	---	Y	BG	BG	---	Y	Y
MV-CA013-20GM	Y	Y	---	---	---	---	---	---	---
MV-CA013-30GM	Y	Y	Y	---	---	---	---	---	---
MV-CA013-30GC	Y	---	---	Y	GR	GR	GR	Y	Y
MV-CA030-10GM	Y	Y	Y	---	---	---	---	---	---

MV-CA030-10GC	Y	---	---	Y	GB	---	GB	Y	Y
MV-CA050-20GM	Y	Y	---	---	---	---	---	---	---
MV-CA060-10GM	Y	Y	---	---	---	---	---	---	---
MV-CA060-10GC	Y	---	---	Y	RG	RG	RG	Y	Y

Note: YUV 422 8 is the default output data format for color camera. Mono8 is the default output format for black and white camera. “Y” means support and “---” means not support.

Color camera changes from the original data to RGB8 by color interpolation algorithm. Bayer GB, Bayer GR and any other patterns are shown in the following four figures.

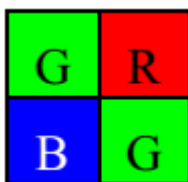


Figure 3-3 Bayer GR Pixel Pattern

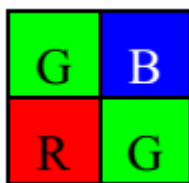


Figure 3-4 Bayer GB Pixel Pattern



Figure 3-5 Bayer BG Pixel Pattern

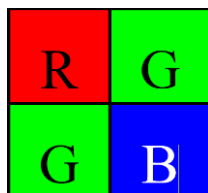


Figure 3-6 Bayer RG Pixel Pattern

The camera uses 12 bit ADC (some only support 10 bit ADC). Support 8 bit data output according to your data processing capacity.

The camera will capture 8 bit from Most Significant Bits just as MSB8 output, in order to maintain the grey level output of the image data.

The bytes number corresponding to different formats are shown in Table 3-2.

Table 3-2 Pixel Format

Pixel Format	Byte Number
Mono 8, Bayer GB/GR/BG/RG 8	1
Bayer GR/GB/RG 12 Packed, Bayer BG/GR/RG 10 Packed, Mono10 Packed, Mono12 packed	1.5
Bayer GR/GB/RG 12, Bayer BG/GR/RG 10, YUV 4:2:2 (YUYV), YUV4:2:2 (YUYV) Packed	2
RGB 8	3

Click Image Format Control in the attribute list and select Pixel Format. You will find the supported pixel format. Choose the appropriate data output format as shown in Figure 3-7 and finish setting.

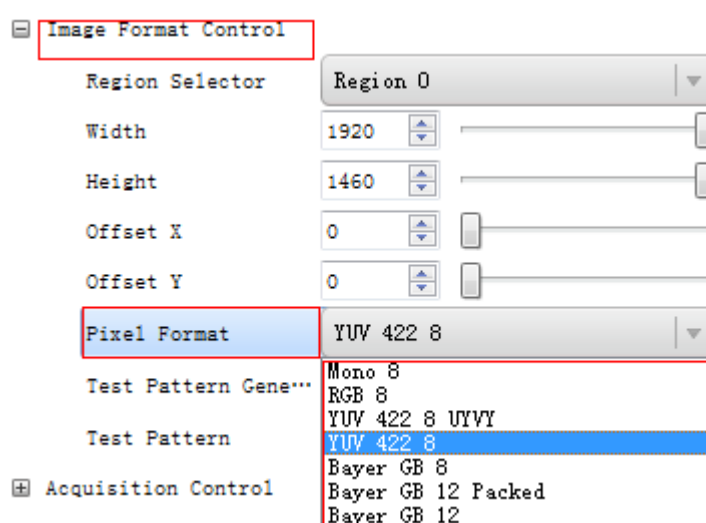


Figure 3-7 Frame Rate Setting

3.2.2 Frame Rate

The network transmission bandwidth, pixel format and output ROI resolution decides the maximum camera frame rate. Please refer to the frame rate formula when setting ROI.

Click Acquisition Control in the attribute list and select Acquisition Frame Rate. Input available frame rate as shown in Figure 3-8 and finish setting.

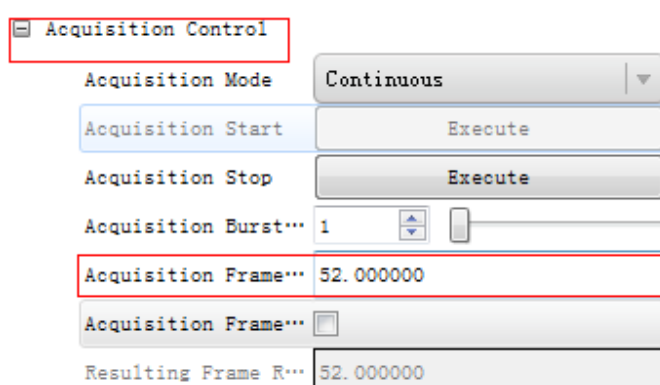


Figure 3-8 Frame Rate Setting

3.2.3 ROI Setting

The following three factors decide the maximum camera frame rate:

- Frame Readout time: the shorter the image height, the less the readout time and the higher the frame rate.
- Exposure time: the less the exposure time, the higher the frame rate.
- Bandwidth: the wider the bandwidth, the higher the frame rate.

The camera can output ROI images depending on your requires. ROI setting can decrease the data transmission bandwidth and increase the camera frame rate. The following formulas show the frame rate corresponding to the ROI:

$$\text{Fps1} = 1/(\text{ROI height} * \text{T1} + \text{ROI OffsetY} * \text{T2} + \text{T3});$$

$Fps2 = 1/Exp\ Time;$

$Fps3 = Bandwidth / PayloadSize;$

Table 3-3 ROI and Frame Rate Parameter Table

Model \ Value	T1(us)	T2(us)	T3(us)
MV-CA003-30GM/GC	31.33	0	1410.15
MV-CA013-20GM	11.06	0	375.89
MV-CA013-30GM/GC	18.69	0	691.66
MV-CA030-10GM/GC	25.83	4.31	2273.33
MV-CA050-20GM	18.77	0	150.19
MV-CA060-10GM/GC	17.82	0	1493.3

The lowest frame rate within the three formulas is Resulting Frame Rate.

Click Image Format Control and move. Select Width and Height. Adjust the ROI on the right side. The value in the Offset X and the Offset Y refer to the ROI starting point at the top left corner. The following figure shows the ROI setting.

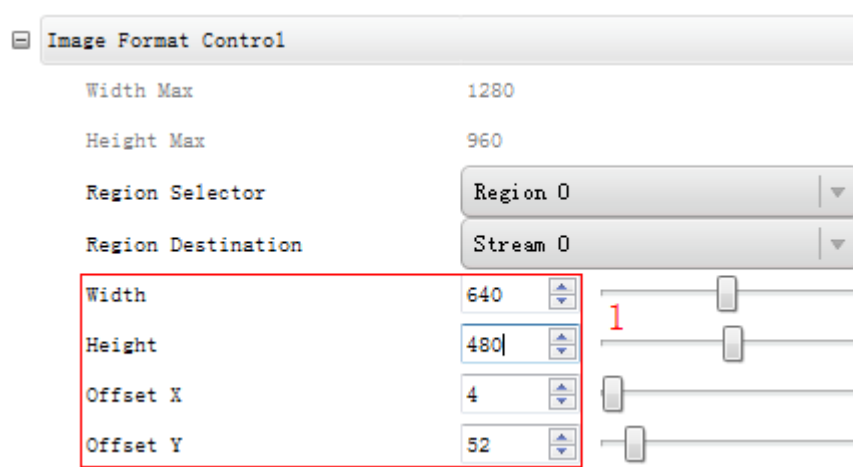


Figure 3-9 ROI Setting

Note: For more information about bandwidth and Payload Size, please see the chapter of Transmission Layer Control.

3.3 Global Shutter and Rolling Shutter

3.3.1 Global Shutter

Support global shutter camera. Exposure starts and ends in each line simultaneously. Data readout is after the exposure. The time for the sensor collecting exposure and for the data readout are the same, but as shown in Figure 3-10, different in the actual readout time.

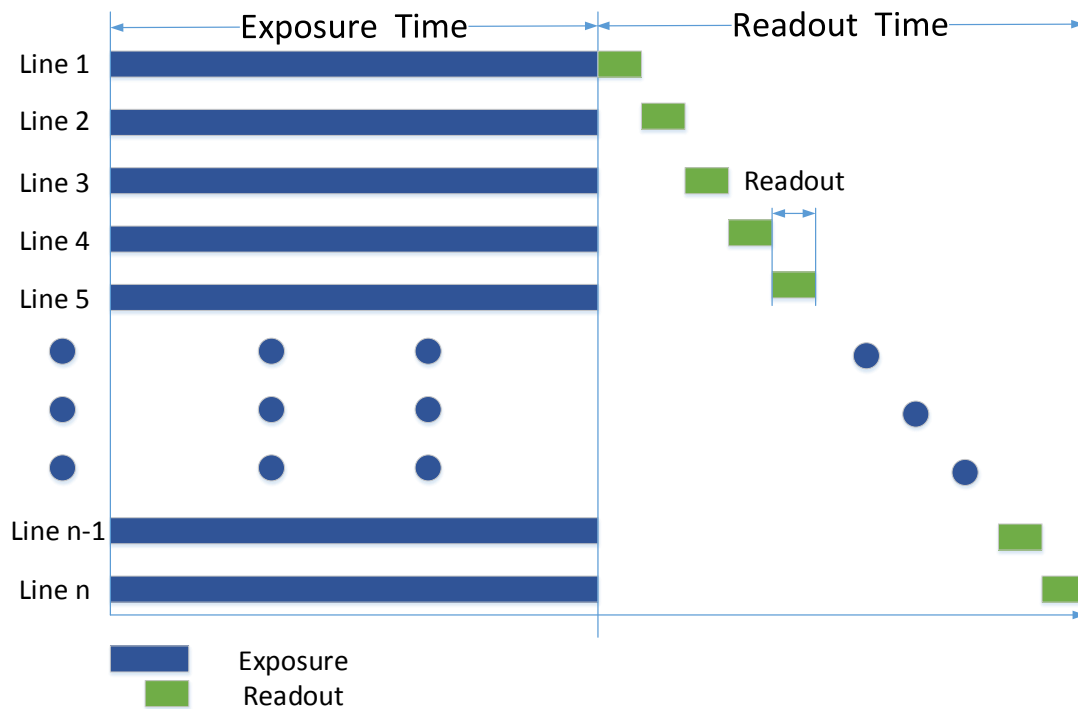


Figure 3-10 Global Shutter

3.3.2 Rolling Shutter

Support rolling shutter camera. The exposure starts in the first row, and the data will read out simultaneously. After the whole action, the rest of rows start to expose and read out one by one. The time for the sensor collecting exposure and for the data readout are the same, but as shown in Figure 3-11, different in the exposure starting time.

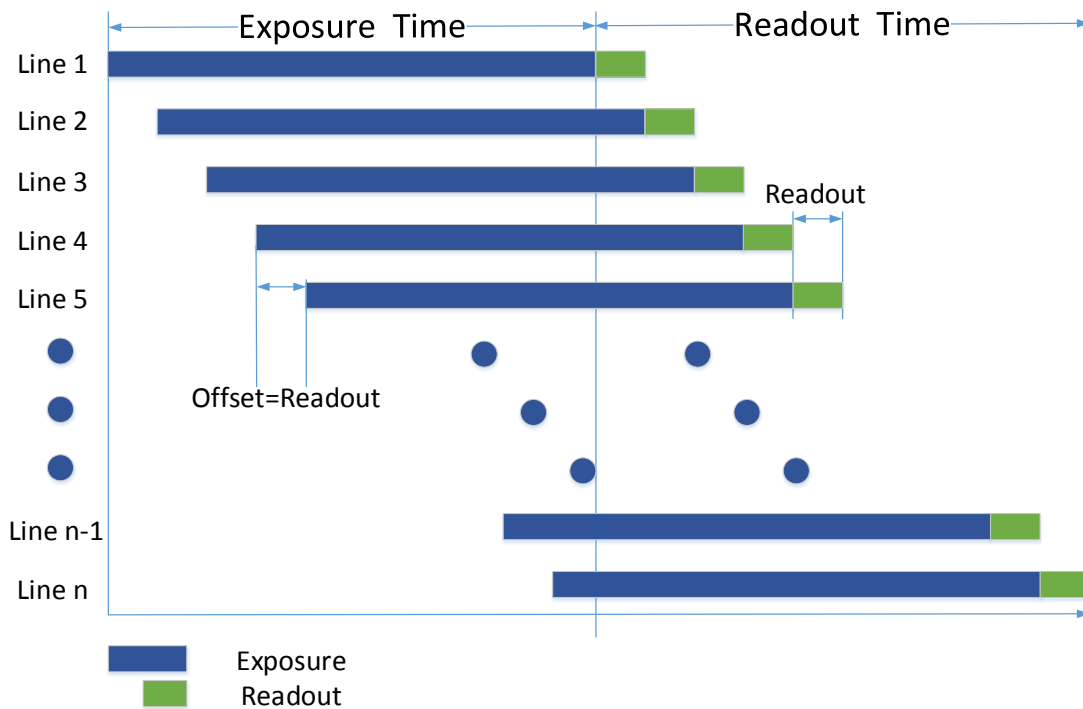


Figure 3-11 Rolling Shutter

- The figure of rolling shutter’s signal readout under internal trigger mode

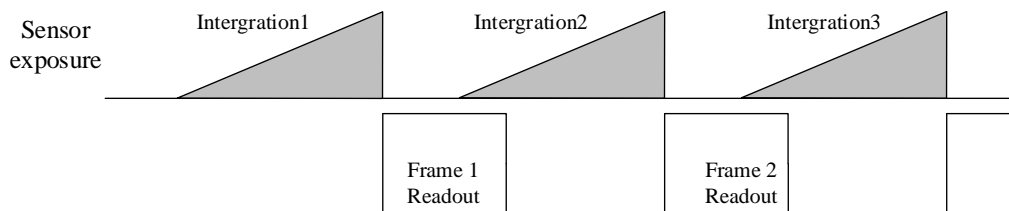


Figure 3-12 Internal Trigger Mode

- The figure of rolling shutter’s signal readout under the external trigger mode

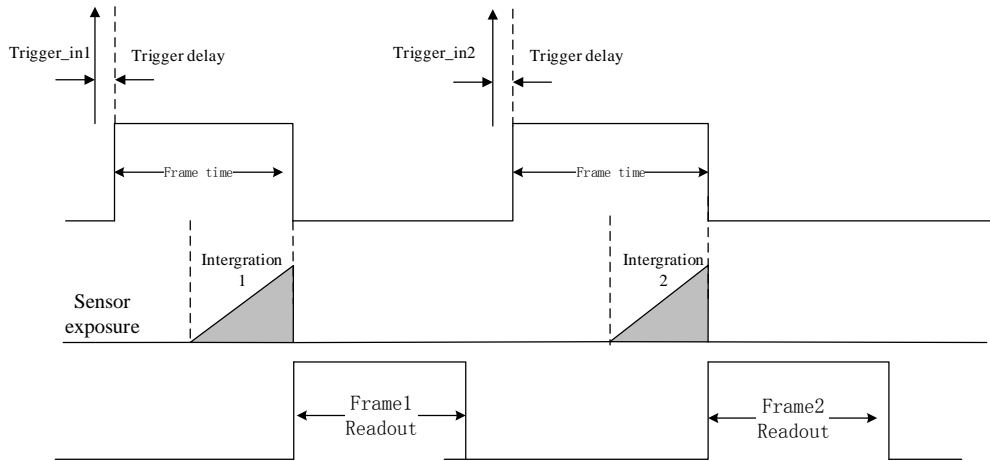


Figure 3-13 External Trigger Mode

3.4 Image Acquisition and Transmission

Image acquisition mode is divided into internal trigger mode and external trigger mode. Internal trigger mode includes continuous acquisition mode and single frame acquisition mode. External trigger mode includes software trigger mode and hardware external trigger mode.

Select On or Off in Trigger Mode to select either internal trigger mode or external trigger mode. (Off refers to the internal trigger mode and On refers to the external trigger mode.)

3.4.1 Internal Trigger Mode

The Camera can output one image or several images continuously in the internal trigger mode.

Click Acquisition Control in the attribute list. Select Acquisition Mode and you will see elements of Continuous and SingleFrame. Continuous refers to outputting images

continuously based on the configured frame rate. SingleFrame refers to outputting only one image, as shown in Figure 3-14.

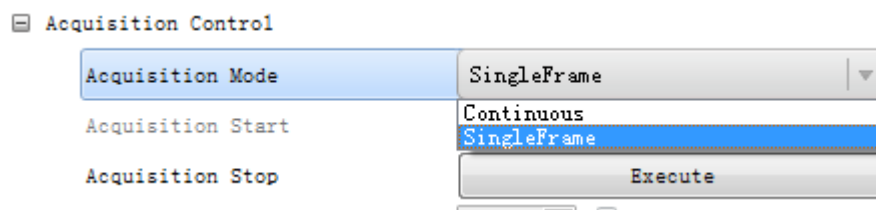


Figure 3-14 Internal Trigger Mode

3.4.2 External Trigger Signal and Working Mode

The signal for the camera to acquire external trigger signal includes the software trigger signal and the signal from external level.

Under the external trigger signal mode, the camera can output images according to single frame mode, burst mode, PWM mode and any other working modes.

- Software trigger mode

Support software trigger mode. When setting software trigger mode, the client software will send command to the camera to capture and transfer images by gigabit network.

Click Acquisition Control in the attribute list and select Trigger Mode. Choose On to open trigger mode. Select Trigger Source and choose Software to switch to the software external trigger status. Click Execute in Trigger Software to trigger image acquisition, as shown in Figure 3-15.

Trigger Mode	On 1
Trigger Software	Execute 3
Trigger Source	Software 2
Trigger Activation	Rising Edge
Trigger Delay	0.000000
Exposure Mode	Timed
Exposure Time	19225.000000

Figure 3-15 Software Trigger Mode Setting

- Hardware external trigger mode

Select Trigger Source and Choose Hardware to switch to the hardware external trigger status.

Available parameter setting of input signal from hardware external trigger:

(1) Trigger edge selection

Selecting Rising Edge/Falling Edge under the external signal is available.

(2) Trigger delay

As shown in Figure 3-16, in order to integrate later, the camera can set delay time when receiving the trigger signal. As shown in Figure 3-17, the delay time can be set through Trigger Delay. The range is from 0 to 32000000 and the unit is μs .

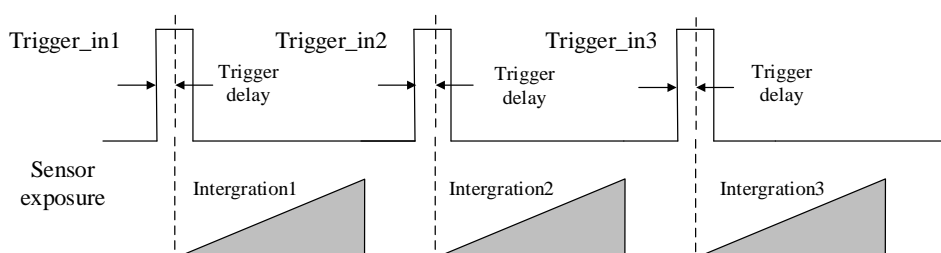


Figure 3-16 Signal Delay Principle

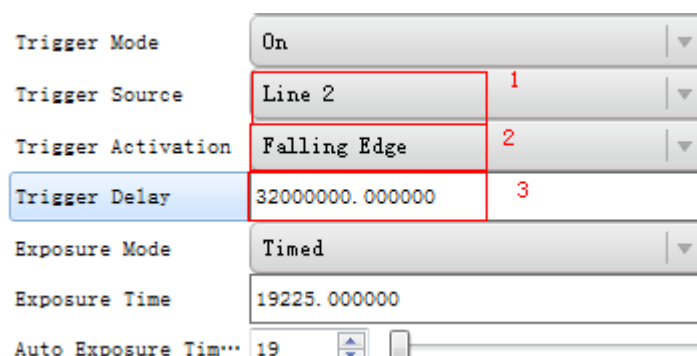


Figure 3-17 Delay Time Setting

(3) Triggering Anti-jitter

The noise may exist in external trigger's input signal and it may cause spurious triggering status if it goes into the camera. Thus the debounce is necessary.

The debounce parameter can be set through Line Debouncer Time in the client software. The unit is μs . The timing sequence map is shown in Figure 3-18. The camera will ignore the trigger signal if the debouncer time is longer than the triggering signal time.

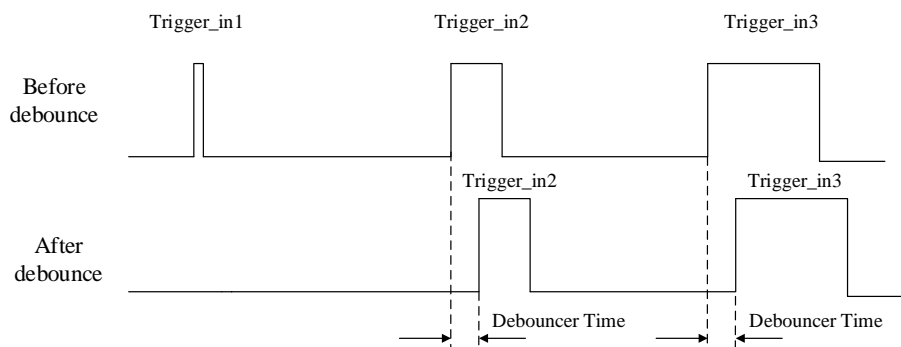


Figure 3-18 The Debounce of Triggering Input Signal Sequence Map

3.5 Strobe Output

Strobe is external trigger output signal and is used for controlling external devices such as flashing light and so on. You can set the Strobe polarity, duration, output delay

and pre-trigger through the client software.

As shown in Figure 3-19, click Digital IO Control. Select Line Selector and choose output pin. Check Strobe Enabled and finish setting.

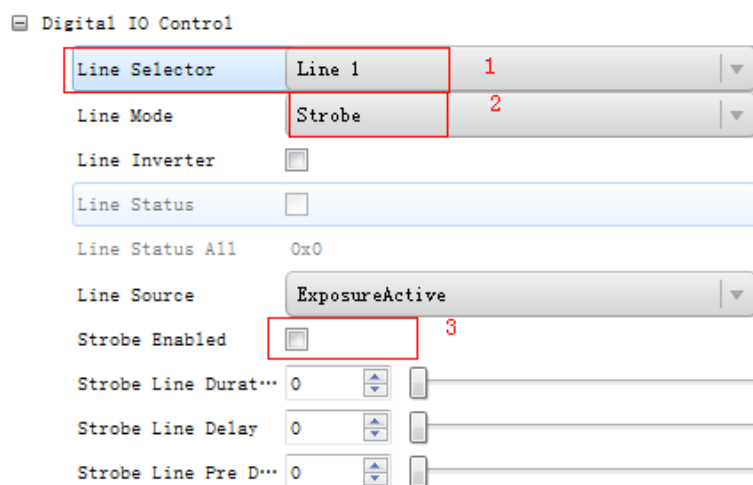


Figure 3-19 Strobe Output Mode

Available Strobe parameter setting:

(1) Polarity setting

Tick Line Inverter to set polarity external trigger’s output signal, as shown in Figure 3-20.

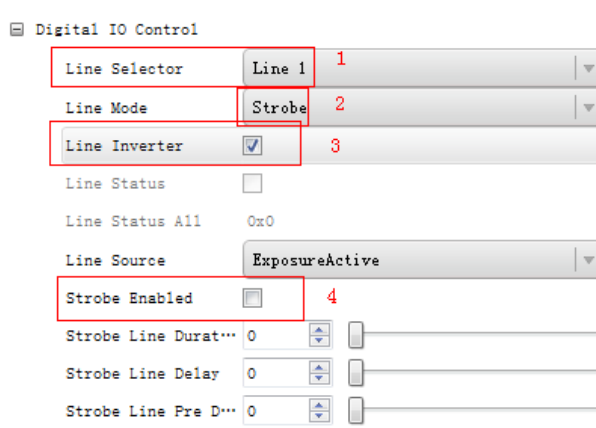


Figure 3-20 Modifying Strobe Polarity

(2) Strobe valid time

As shown in Figure 3-21, Strobe is set to high level. When exposure starts, Strobe will output immediately. Strobe Line Duration value decides the Strobe duration: when the Strobe Line Duration value is 0, the Strobe duration is equal to the exposure time; when the Strobe Line Duration value is not 0, the Strobe duration is equal to Strobe Line Duration value.

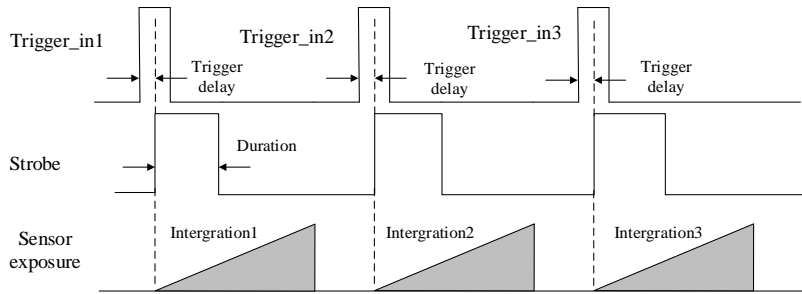


Figure 3-21 Strobe Valid Electrical Level Duration

(3) Strobe output delay

The camera supports the function of Strobe signal output delay to satisfy special application: as shown in Figure 3-22, when exposure starts, the Strobe output is not valid immediately. Instead, the Strobe output will delay according to the setting in Strobe Line Delay.

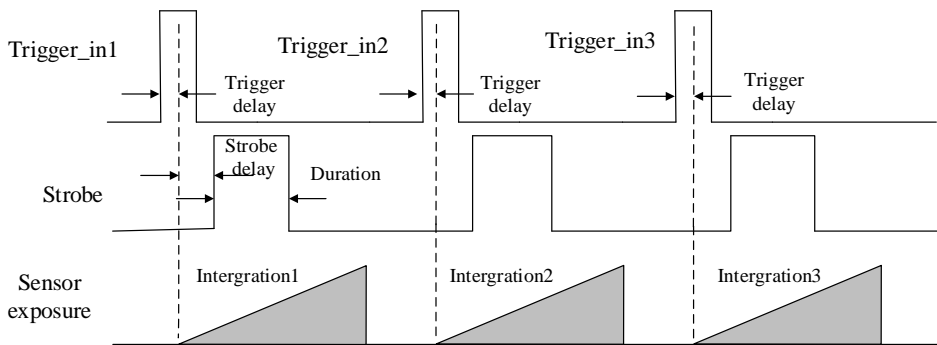


Figure 3-22 Strobe Output Delay Sequence Map

(4) Strobe pre-trigger

Support Strobe pre-trigger. Strobe signal is valid before the sensor exposure. This

function can apply to the LED light that takes time to be stable after starting. It is necessary for a stable light source when capturing images. Pre-trigger time can be set through Strobe Line Pre Delay in the client as shown in Figure 3-23.

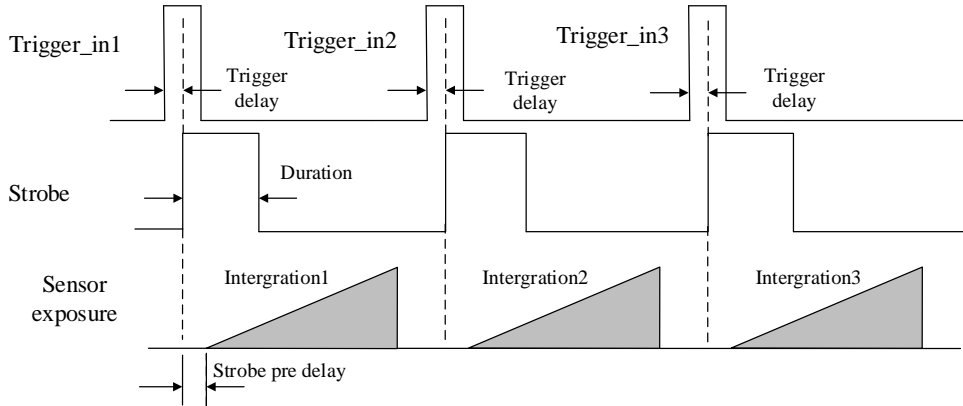


Figure 3-23 Strobe Pre-trigger Sequence Map

3.6 Acquisition Mode under External Trigger

The acquisition mode under external trigger includes single frame mode, burst mode and PWM mode. The relationship among the input trigger signal, the Strobe output signal, the exposure time and readout time under different modes is as follows:

(1) Single frame mode

Expose only once when inputting one trigger signal.

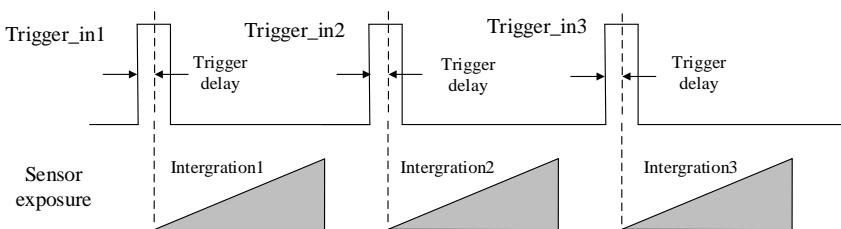


Figure 3-24 Single Frame Mode

The frame rate and exposure time decide to trigger the next frame or not when reading out camera data. If exposure is in progress, the camera will ignore another external trigger signal. You can set a longer exposure time to achieve Bulb Shutter.

(2) Burst mode

The camera supports burst mode: receiving one trigger signal and outputting multiply frames images. You can set the burst number by Acquisition Burst Frame Count in the client software. The range is from 0 to 1023. The sequence map is shown in Figure 3-25. If Burst Frame Count = 3, one trigger signal will output three frames images and at the same time output three strobe signals.

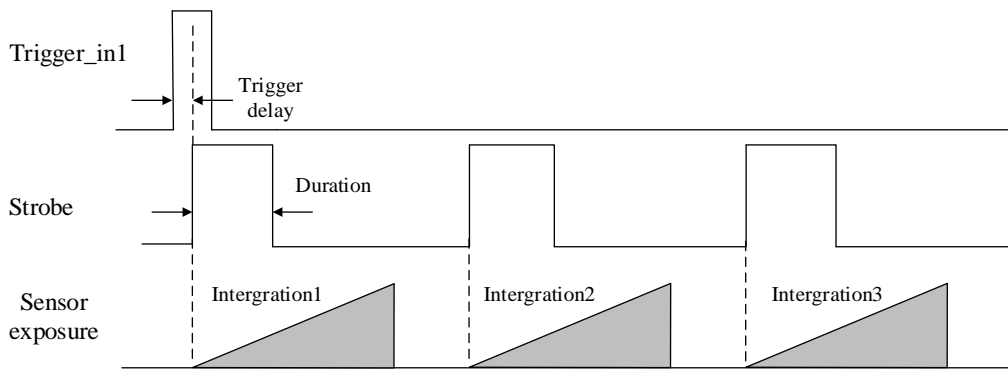


Figure 3-25 Burst Mode Sequence Map

(3) PWM mode

Support PWM mode. The difference in the sensor's exposure time is the main difference between the PWM mode and the single frame mode. In the PWM mode, the duration of trigger source decides the sensor's exposure time of each frame. The sequence map is shown in Figure 3-26.

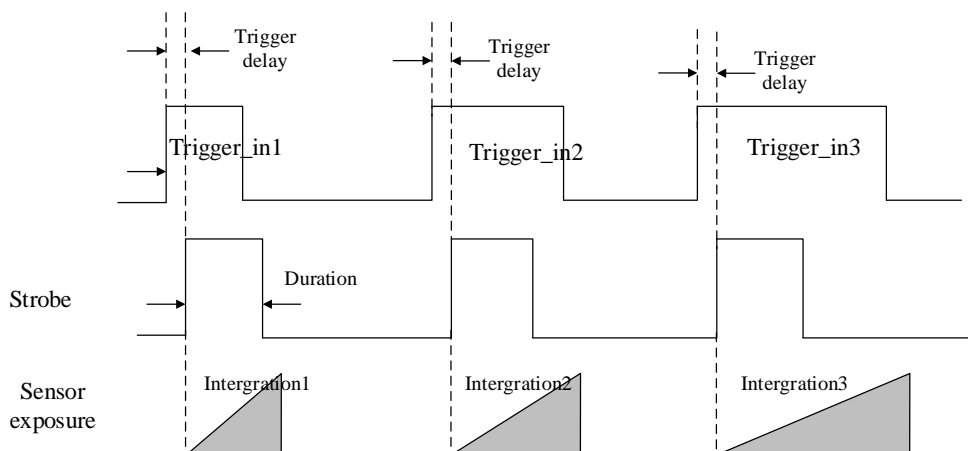


Figure 3-26 PWM Mode Sequence Map

Note: Only the camera of MV-CA030-10GM/GC supports PWM mode.

3.7 Overlap Exposure and Non-overlap Exposure

To capture one frame of image includes the exposure and the readout. According to the overlap relationship between the exposure time and the readout time, cameras with different chips can be divided into overlap exposure and non-overlap exposure.

3.7.1 Non-overlap Exposure

After completing the current frame's exposure and readout, the next frame starts to expose and read out. This process is called non-overlap exposure. The non-overlap exposure's frame period is larger than the sum of the exposure time and the readout time as shown in Figure 3-27 and Figure 3-28.

- Non-overlap exposure under internal trigger mode

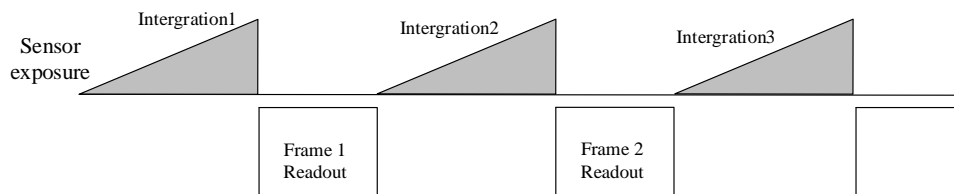


Figure 3-27 Internal Mon-overlap Exposure

- Non-overlap exposure under external trigger mode

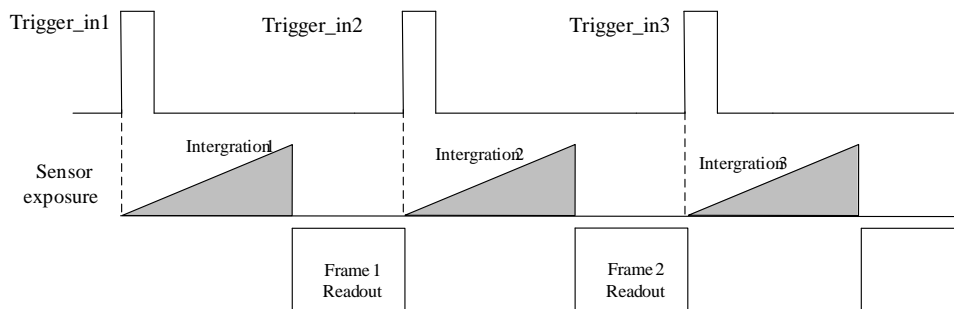


Figure 3-28 External Non-overlap Exposure

The camera will ignore the receiving external signal in the readout section under this mode.

3.7.2 Overlap Exposure

Overlap exposure refers to the overlap between the current frame exposure and the last frame readout. In other words, when the last frame starts to read out, the current frame starts to expose simultaneously.

- Overlap exposure under internal trigger mode

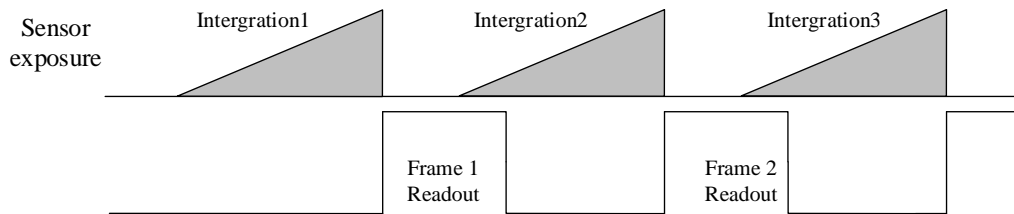


Figure 3-29 Internal Trigger Overlap Exposure

- Overlap exposure under external trigger mode

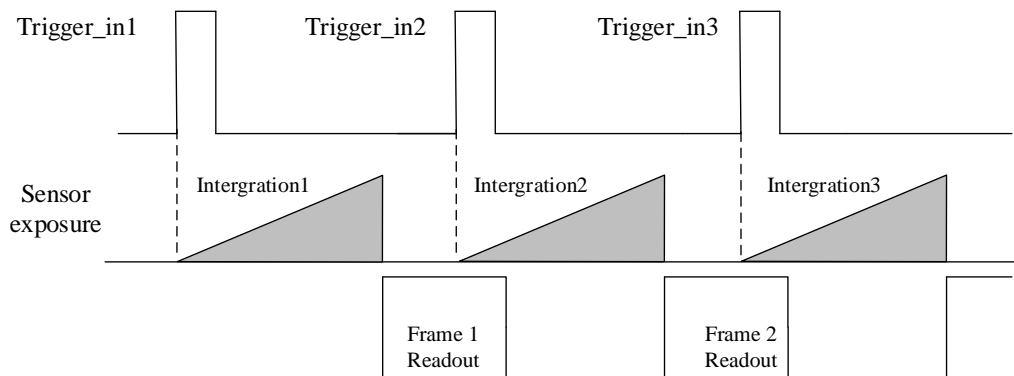


Figure 3-30 External Trigger Overlap Exposure

Note: Cameras of MV-CA003-30GM/GC, MV-CA013-30GM/GC, MV-CA060-10GM/GC do not support overlap exposure under external trigger mode.

3.8 Counter Control

The counter can divide frequencies that from external inputting trigger signal. You can control the exposure depends on your expectations. Operation steps are as follows:

As shown in Figure 3-31, click Acquisition Burst Frame Count and select Trigger Source. Choose Counter 0.

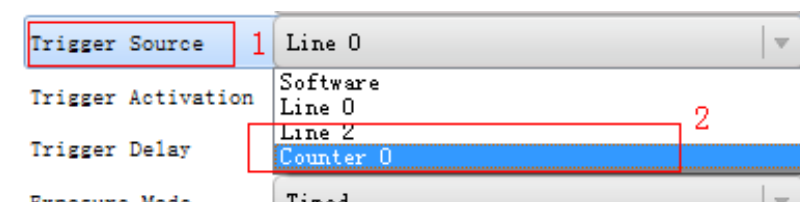


Figure 3-31 Trigger Source Configuration

As shown in Figure 3-32, click Counter And Timer Control and select external trigger source which needs frequency division.

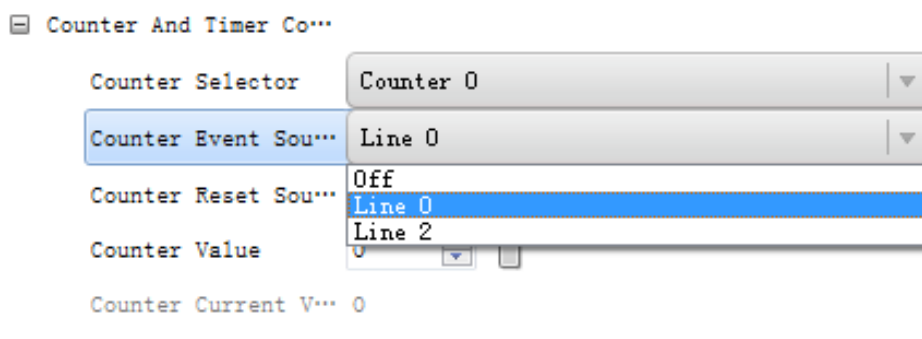


Figure 3-32 Counter Frequency Division Configuration

Note: By default, Line 0 is signal input pin. Line 2 is configurable input and output pin. Configure Line 2 to input pin in Digital IO Control, as shown in Figure 3-33, in order to do frequency division for Line 2.

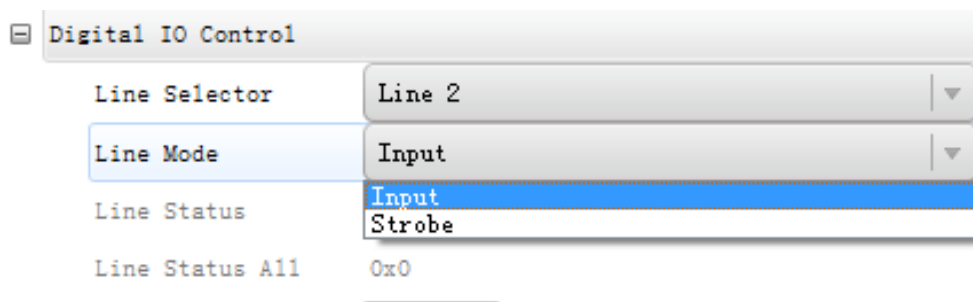


Figure 3-33 Configuring Line 2 Pin to Input

In Counter And Timer Control, you should set Counter Value. Parameter value range is from 1 to 1023. Please see the red 2 in Figure 3-34.

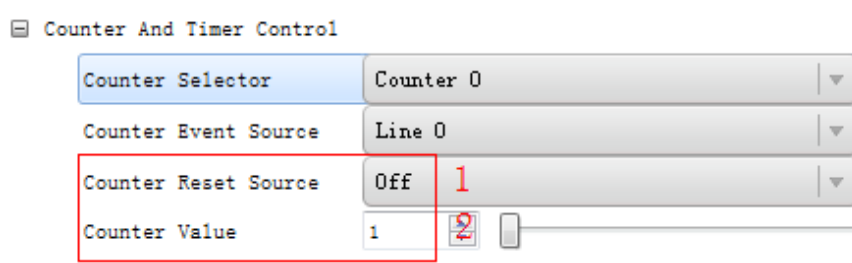


Figure 3-34 Counter Parameter Setting

By default, Counter Reset Source is OFF as shown in the red 1 in Figure 3-34. Click Counter And Timer Control and select Counter Reset Source. Choose Software and click Execute to reset the counter, as shown in Figure 3-35.

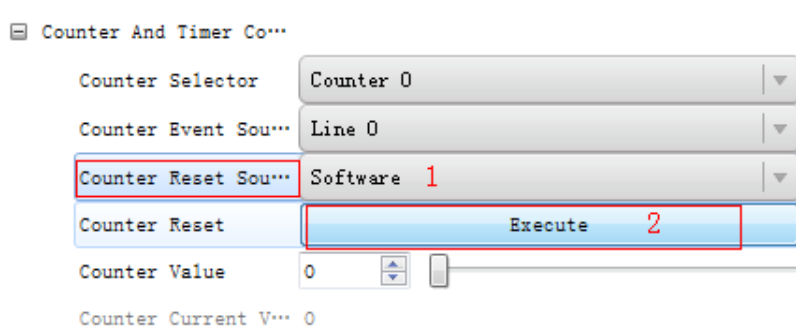


Figure 3-35 Resetting The Counter

3.9 Imaging Parameter Setting

3.9.1 Exposure Time

Please refer to the camera technical index to acquire the supported exposure time. The exposure control supports manual mode, single mode and continuous mode. When setting trigger mode, the single mode and continuous mode are invalid. When setting single mode or continuous mode, the exposure time will be limited by Auto Exposure Time Lower Limit and Auto Exposure Time Upper Limit. The time range should only be set between Auto Exposure Time Lower Limit and Auto Exposure Time Upper Limit.

Click Acquisition Control in the attribute list. Select Auto Exposure Time Lower Limit and Auto Exposure Time Upper Limit. Input available parameter to the numeric field. Set the running parameter range of the auto exposure time, as shown in Figure 3-36.

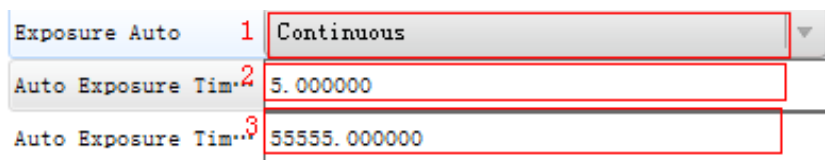


Figure 3-36 Exposure Control

3.9.2 Gain Control

Please refer to the camera technical index to acquire the supported Gain Value. Gain Control supports manual mode, single mode and continuous mode. Gain Control under these three modes can be shown as follows:

Manual mode: Set Gain according to the user's setting value.

Single mode: Set Gain value automatically according to the target image brightness. Set once only.

Continuous mode: Adjusting Gain continuously according to the target image brightness.

When setting single mode or continuous mode, Gain is limited by Auto Gain Lower Limit and Auto Gain Upper Limit. Gain Range should only be set between Auto Gain Lower Limit and Auto Gain Upper Limit.

Click Analog Control in the attribute list. Click Gain Auto. Select Gain Mode. Input available parameter in the numeric field and finish setting, as shown in Figure 3-37.

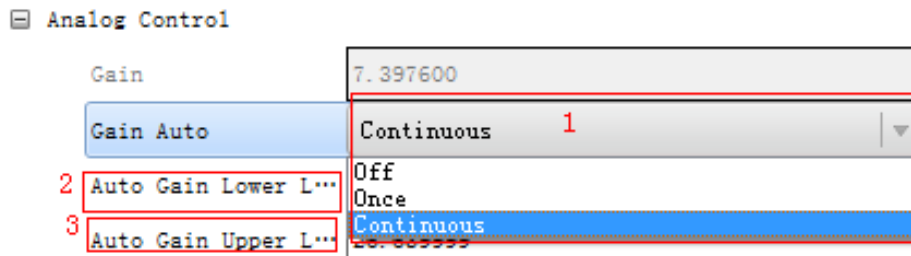


Figure 3-37 Gain Control

The noise increases when Gain increases. Auto exposure and Auto Gain are mutually restricted. When the image is dark, the camera will firstly increase the exposure time. Secondly, the camera starts to adjust Gain Value when the exposure time turns to the maximum. When the image is bright, the camera will firstly decrease Gain Value. Secondly, it starts to adjust the exposure time when Gain Value turns to the minimum.

3.9.3 White balance

The camera supports the white balance. The white balance refers to the camera color adjustment depending on different light sources. Adjust the Gain Value of the image's R channel and B channel to keep white regions white under different color temperatures. Ideally, the proportion of R channel, G channel and B channel in the white region is 1:1:1.

Table 3-4 White Balance Status Introduction

Status	Description
OFF	MBW mode: You can adjust the R, G, and B gain value manually. The adjustable range is 1 to 4095, 1024 means the ratio is 1.0 .
ONCE	Adjust the white balance value according to the current scene and the adjustment stops automatically after a while. The adjustment adopts a algorithm that looks for the gray blocks in the Bayer data.

Note: The white balance adjustment is only available in color models.

Click Analog Control in the attribute list. Click Balance White Auto and Balance Ratio Selector. Select available white balance status parameter and finish setting, as shown in Figure 3-38.

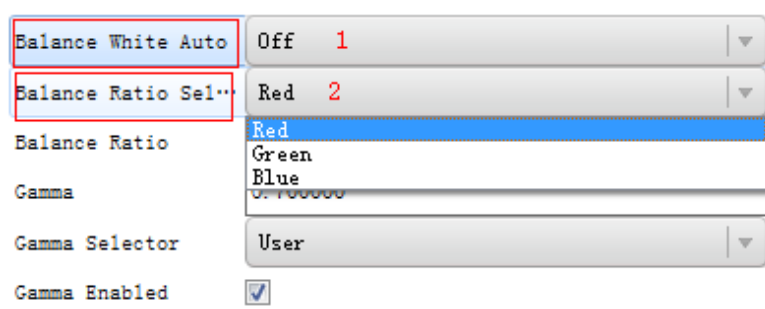


Figure 3-38 White Balance Setting

3.9.4 Region Setting of Auto Functions

The camera can adjust exposure time and white balance automatically to achieve your expectations. By default, the camera will adjust the brightness and the white balance of the whole image. In addition, you can also set an area of interest, which is called AOI. The camera will adjust the AOI in the image. And the area outside the selected region will also be changed.

Regional exposure and regional white balance are generally used in the back light scene and the scene with the great difference of regional brightness. You can also select rectangle region. The camera will adjust the region's exposure and white balance to achieve the best image quality.

Click Analog Control in the attribute list. Select Auto Function AOI Selector. Choose AOI1 or AOI2. Adjust Auto Function AOI Width value and Auto Function AOI Height value and finish setting, as shown in Figure 3-39.

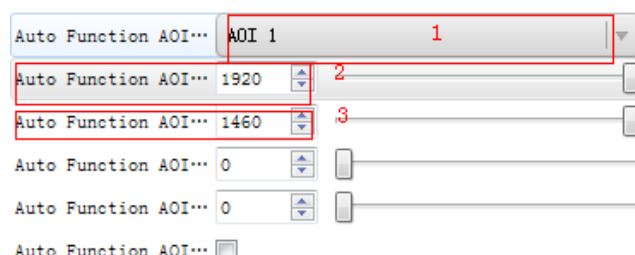


Figure 3-39 AOI Setting

Note: The available exposure region and the white balance region are the overlapped part of the setting region and the image region. If there is no overlap, the available region refers to the whole image.

3.9.5 Look Up Table (LUT)

LUT is the grey level mapping table. You can change the grey level in your interested regions. The operation can be linearity curve or custom mapping curve. LUT and Gamma are mutually exclusive.

Set the user mode to Guru Mode. Click LUT Enable and adjust the parameters, as shown in Figure 3-40.

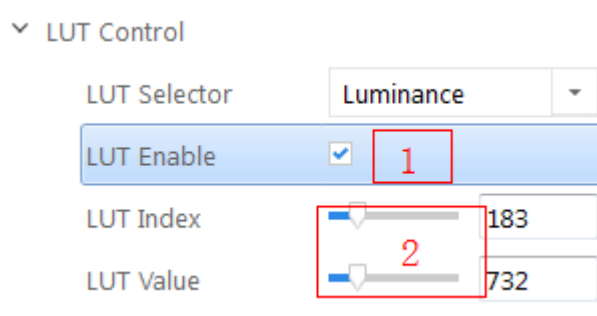


Figure 3-40 LUT Setting

3.9.6 Gamma Correction

The camera supports Gamma Correction. Normally, the output of the camera chip and the number of photon that the sensor (on the chip) received are linear. And Gamma Correction provides a non-linear output. If the Gamma value is between 0.5 and 1, the image brightness decreases while the brightness of the dark area increases. If the Gamma value is between 1 and 4, the image brightness increases while the brightness of the dark area decreases.

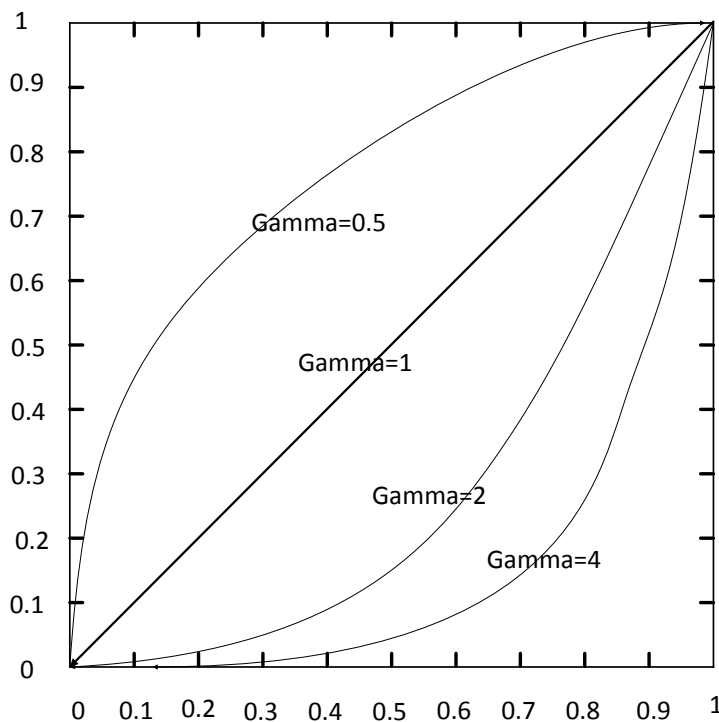


Figure 3-41 Gamma Curve

Click Analog Control in the attribute list. Select Gamma and Gamma Selector and set the parameter as shown in Figure 3-42.

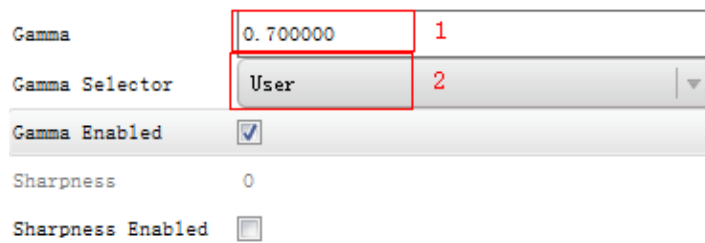


Figure 3-42 Gamma Setting

Note: Different cameras versions have different default function parameters. The figures shown above are only for reference.

3.9.7 Brightness, Hue and Saturation

- Brightness

You can adjust the brightness of the exposure target. The default value is 64. The larger the value, the brighter the image.

- Hue

You can adjust the hue value in HSV. The default value is 128.

- Saturation

You can adjust the saturation value in HSV. The default value is 128. The larger the value, the higher the saturation and the stronger the color.

Note: The hue and the saturation are only for the color camera.

3.9.8 Image Reverse

The camera supports image horizontal mirroring. Open the mirroring function to gain the horizontal mirroring image. Click Image Format Control. Tick Reverse X

(horizontal) or Reverse Y (vertical) according to your preference, as shown in Figure 3-43.

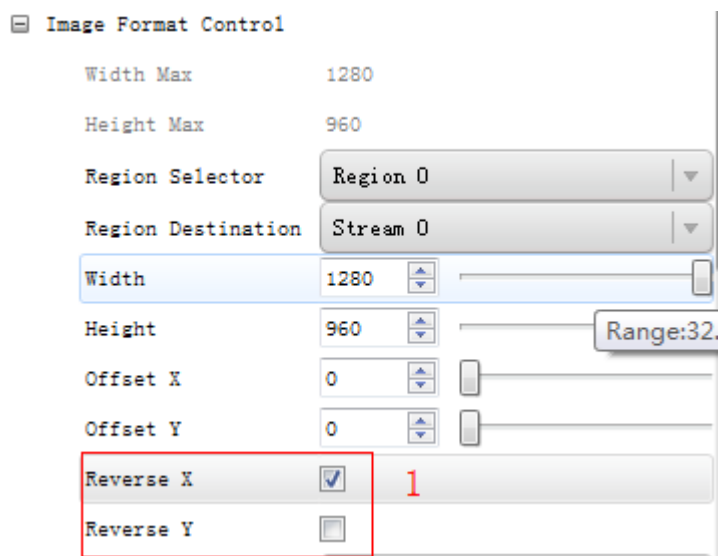


Figure 3-43 Tick Mirroring Function

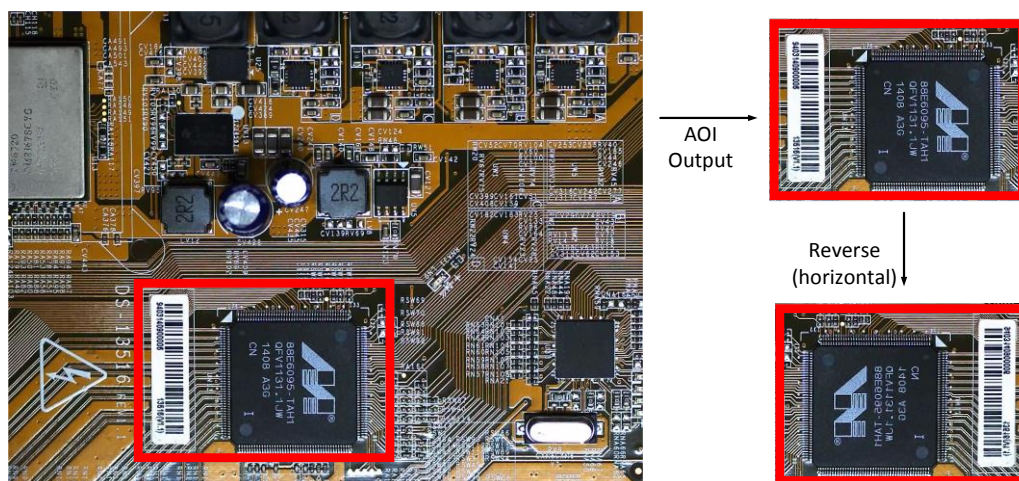


Figure 3-44 The Comparison of ROI Output Before And After Mirroring

3.9.9 HDR Cycling Mode

The camera supports HDR cycling mode: the camera can capture images in cycling mode depending on four groups of parameters. You can configure exposure time and Gain independently by setting parameters in each group.

Click Acquisition Control and choose Selector. Set parameters in each group. Set

available parameter in HDR Shutter and HDR Gain. Tick HDR Enable and finish setting, as shown in Figure 3-45.

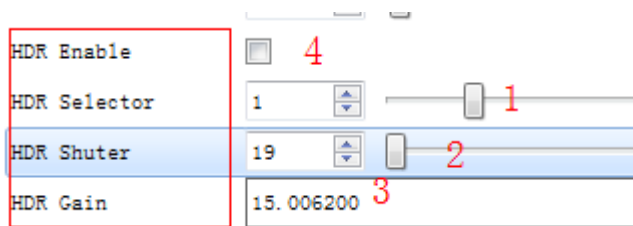


Figure 3-45 Four Groups of Parameters' HDR Cycling.

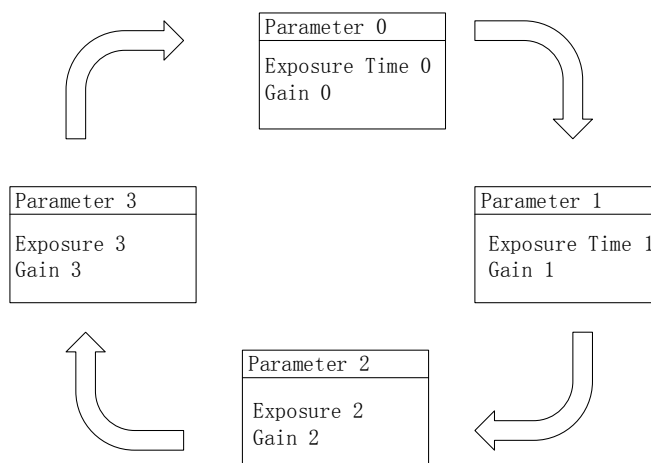


Figure 3-46 HDR Cycling Map

Note: The camera of MV-CA030-10GM/GC does not support HDR cycling mode.

3.9.10 Test pattern

Click Image Format Control in the attribute list. Select Test Pattern and set the parameter. The default test pattern is OFF, as shown in Figure 3-47.

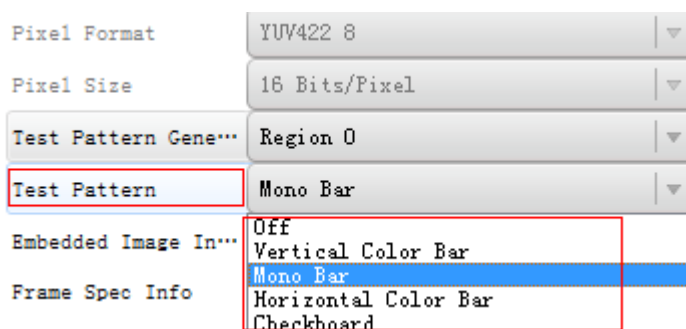


Figure 3-47 Test Pattern

The camera provides four test patterns, including Mono Bar, Vertical Color Bar, Horizontal Color Bar and Checkboard as shown in the following four figures.

Note: Color camera and black and white camera have different test patterns. The specific test pattern is decided by the camera function.

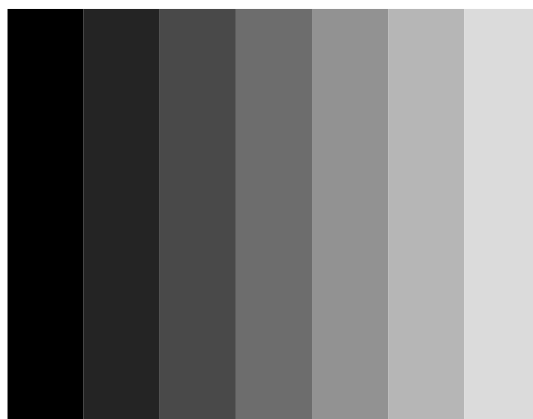


Figure 3-48 Mono Bar Test Pattern

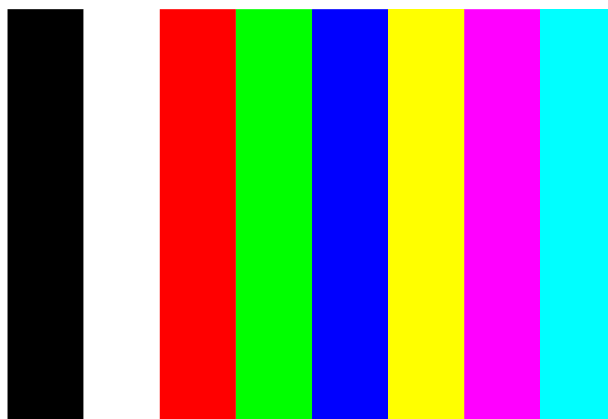


Figure 3-49 Vertical Color Bar Test Pattern

 


Figure 3-50 Horizontal Color Bar Test Pattern

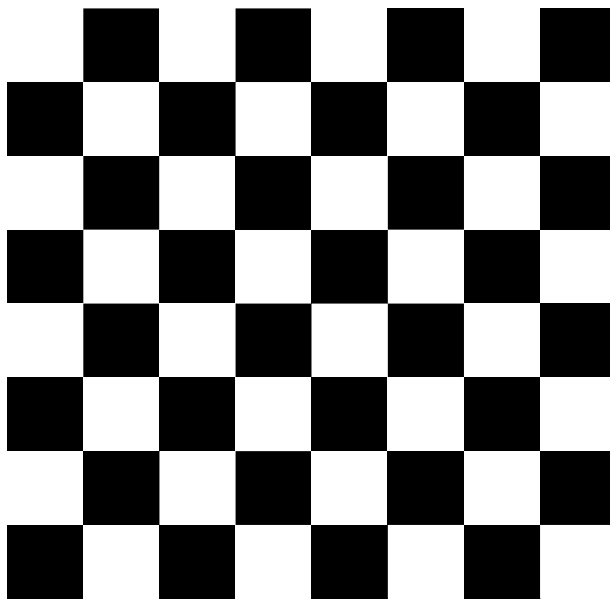


Figure 3-51 Checkboard Test Pattern

3.10 I/O Electric Feature

3.10.1 Line0 Opto-isolated Input Circuit

In controlling camera I/O, Line0 input circuit can be shown in Figure 3-52.

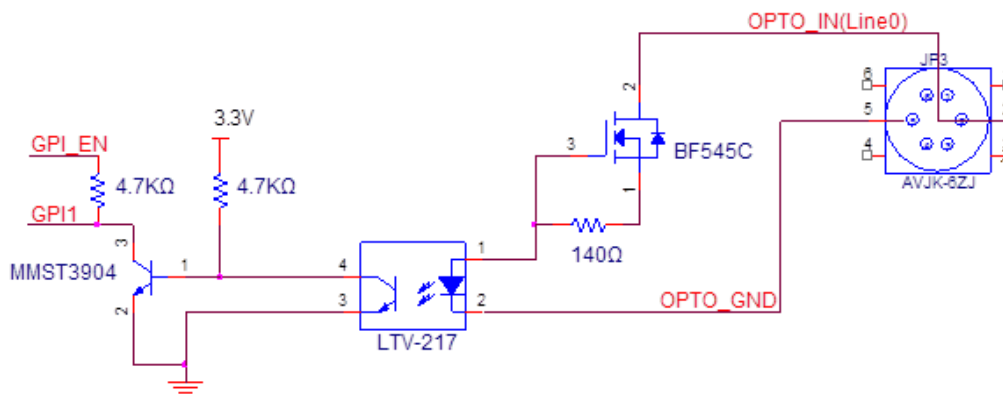


Figure 3-52 Input Circuit

Logic 0 input level: 0~1VDC (OPTO_IN pin)

Logic 1 input level: 1.5~24VDC (OPTO_IN pin)

Maximum input current: 25 mA

Please make sure the input voltage is not from 1V to 1.5V as the electric status among the two values is not stable.

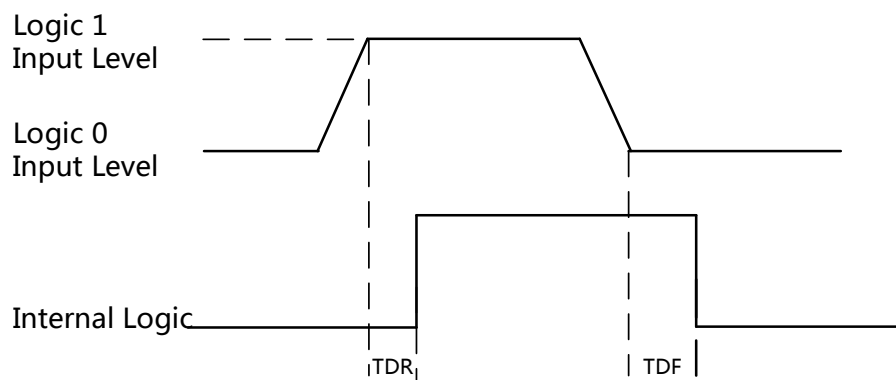


Figure 3-53 Input Logic Level

Input rising delay (TDR): 2.6μs

Input falling delay (TDF): 19.2μs

3.10.2 Line1 Opto-isolated Output Circuit

In controlling I/O, Line1 output circuit can be shown in Figure 3-54.

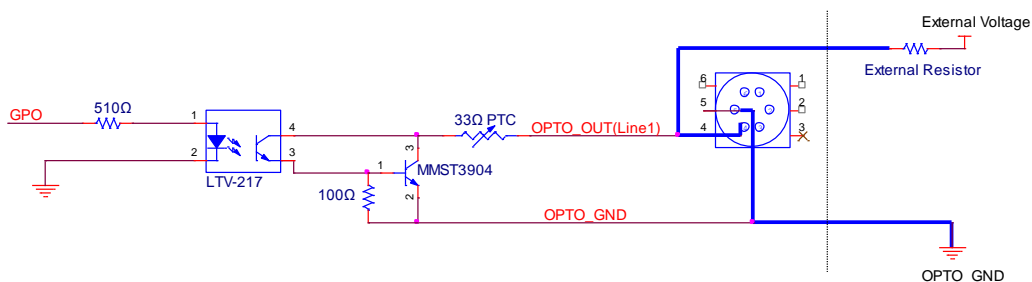


Figure 3-54 Output Circuit

Maximum Line1 output current: 25 mA

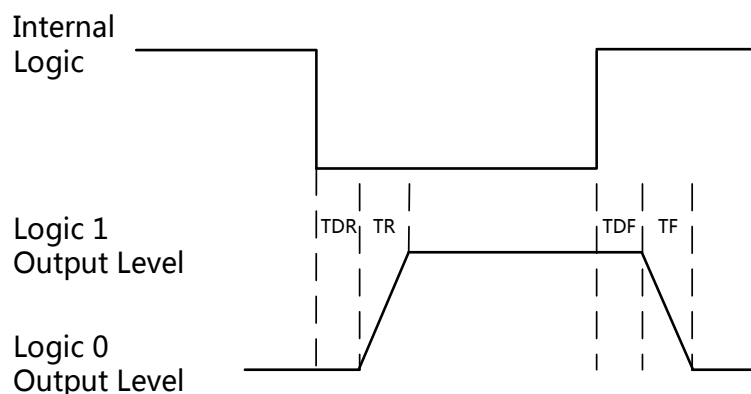


Figure 3-55 Output Logic Level

Opto-isolated output electric feature can be shown in Table 3-5 (The external voltage is 3.3 V and the external resistance is 1 K.)

Table 3-5 Output Electric Feature

Parameter	Symbol	Value
Output Logic Low Level	VL	575mV
Output Logic High Level	VH	3.3V
Output Rising Time	TR	8.4us
Output Falling Time	TF	1.9us
Output Rising Delay	TDR	16.6us
Output Falling Delay	TDF	3.6us

Table 3-6 shows the corresponding current and the parameter of output logic low level when the opto-isolated outputs the different external voltage and resistance.

Table 3-6 The Parameter of Output Logic Low Level

External Voltage	External Resistor	VL	Output Current
3.3V	1K Ω	575mV	2.7mA
5V	1K Ω	840mV	4.1mA
12V	2.4K Ω	915mV	4.6mA
24V	4.7K Ω	975mV	4.9mA

3.10.3 Line2 Configurable Bi-direction I/O Circuit

In controlling I/O, the configurable bi-direction non-isolated IO circuit of Line2 can be shown in Figure 3-56.

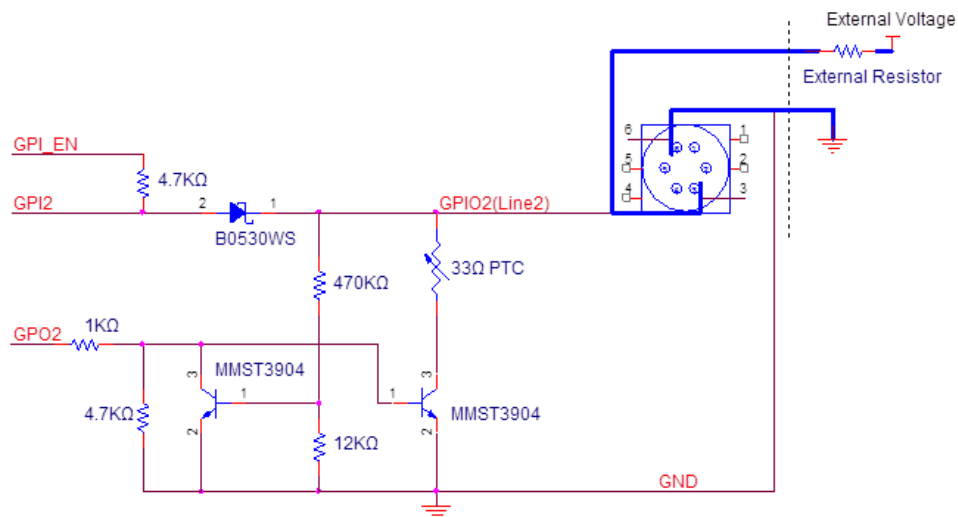


Figure 3-56 Line2 Bi-direction I/O Circuit

Note: The camera of MV-CA030-10GM/GC has no such function.

1. Configure Line2 to input pin

Logic 0 input level: 0~0.5VDC (GPIO2 pin)

Logic 1 input level: 1.5~30VDC (GPIO2 pin)

Please make sure the input voltage is not from 0.5V to 1.5V as the electric status among the two values is not stable.

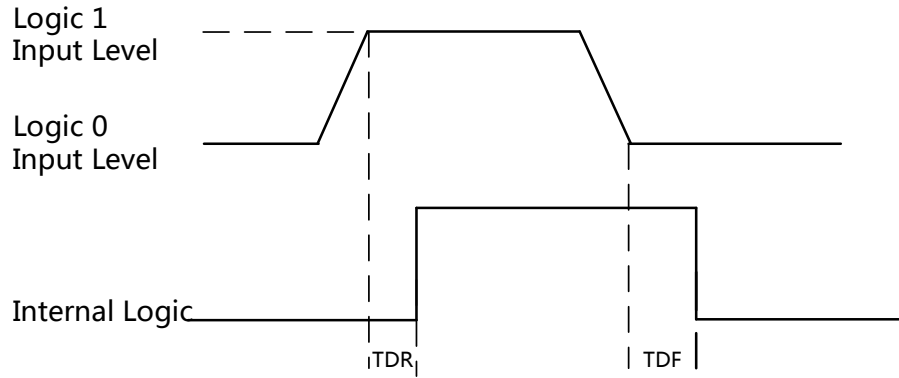


Figure 3-57 Inputting Logic Level

Please connect to GND pin first to protect GPIO pin and then input voltage to Line2 pin.

2. Configure Line2 to output pin

The available maximum current is 25mA and the output impedance is 40Ω.

When the environment temperature is 25 degree centigrade, the relationship among external voltage, impedance and the output low level can be shown in Table 3-7.

Table 3-7 The Parameter of Output Logic Low Level

External Voltage	External Resistor	VL (GPIO2)
3.3V	1KΩ	160mV
5V	1KΩ	220mV
12V	1KΩ	460mV
24V	1KΩ	860mV
30V	1KΩ	970mV

When the external voltage of 1KΩ external resistance turns to 5V, features of output logic level and electric feature in GPIO2 configuration can be shown in Figure 3-58 and Table 3-8.

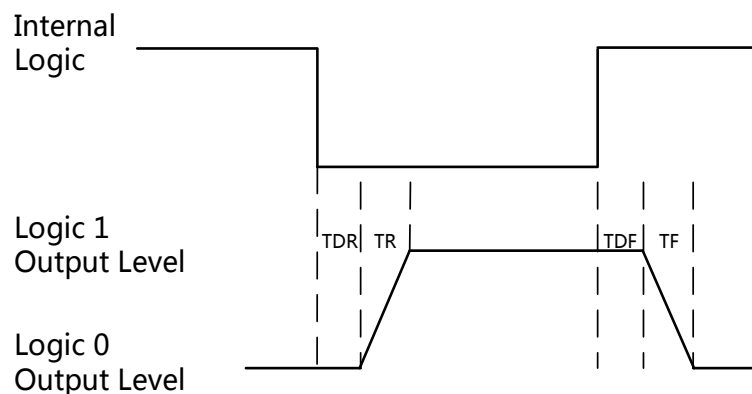


Figure 3-58 Output Logic Level

Table 3-8 Output Electric Feature

Parameter	Symbol	Value
Output Logic Low Level	TR	0.06us
Output Logic High Level	TF	0.016us
Output Rising Time	TDR	0.03us
Output Falling Time	TDF	0.28us

3.11 Transport Layer Control

3.11.1 DHCP and Persistent IP

The camera supports connecting with PC through DHCP or Persistent IP. As shown in Figure 3-59, the camera will acquire IP according to the following order.

- (1) If the camera's Persistent IP is available and the configured Persistent IP is available, the camera will load this Persistent IP. Or execute (2).
- (2) If DHCP function is available and the acquired IP address is available, the camera will load IP address that acquired by DHCP. Or execute (3).
- (3) Acquire LLA.

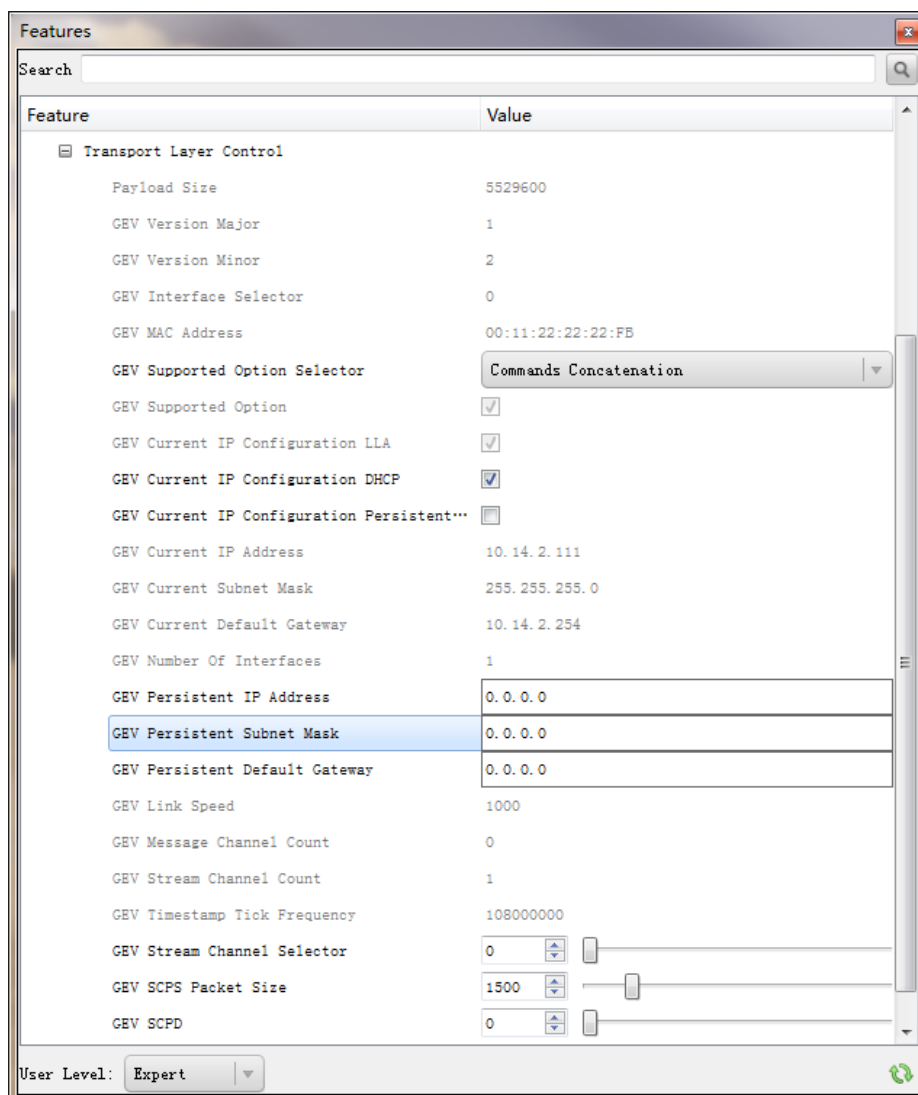


Figure 3-59 The Transport Layer Control Interface

3.11.2 Efficient Bandwidth and Setting

Packet Size and Packet Delay control the 1000M Ethernet's actual bandwidth. The theoretical calculation of 1000M network port's image loading bandwidth is:

$$\text{BandWidth} = \frac{\text{PacketSize} - (\text{IP} + \text{UDP} + \text{GVSP Header})}{\text{PacketSize} + \text{MACHeader} + \text{CRC} + \text{Packet-Delay}} * 1000\text{M}/\text{bps}.$$

Normally, IP/UDP/GVSP Header takes 36 bytes. MAC Header takes 14 bytes. CRC

takes 4 bytes. Taking setting Packet Size 1500 and Packet Delay 400 as an example, the actual network bandwidth is

$$\text{BandWidth}=(1500-36)/(1500+14+4+400)*1000\text{Mbps}=759.36 \text{ Mbps}$$

The actual network bandwidth is smaller than the theoretical one because of the network message, GVCP, GCSP leader, Trailer and any other overheads.

Set Packet Size (GEV SCPS Packet Size) value and Packet Delay (GEV SCPD) value by using the slider and the input box. You can set these two parameters according to the computer performance and the network card performance in the condition of no data package loss, as shown in Figure 3-60.

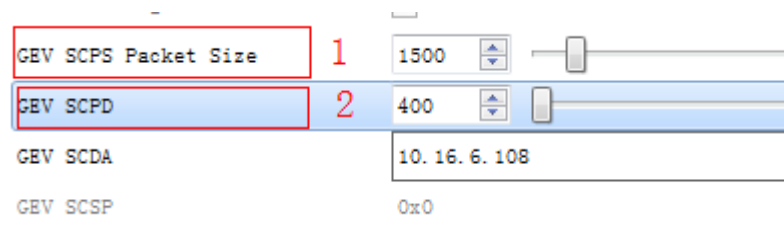


Figure 3-60 Packet Size Setting And Packet Delay Setting

3.12 User Parameter and Preference Setting

3.12.1 Parameters Saving and Loading

The camera can save four groups of parameters, including one group of factory parameter and three groups of configurable parameters. You can save currently configured parameter and set corresponded default parameter when logging in at next time in User Set Control in the attribute list.

Configuration method: Select one of the parameter names in the drop-down box in User Set Selector. Save current parameter setting. In the drop-down box of User Set

Default, select one of the parameters when the client runs, as shown in Figure 3-61. Click Execute in both User Set Save and User Set Load.

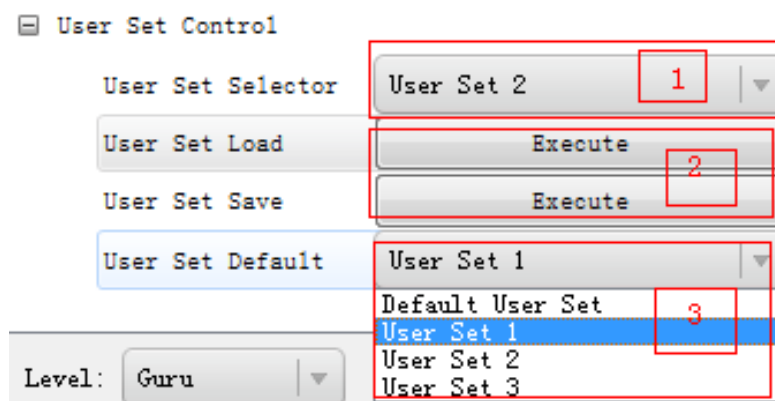


Figure 3-61 Parameters Saving And Loading

Figure 3-62 shows the relationship among four groups of parameters.

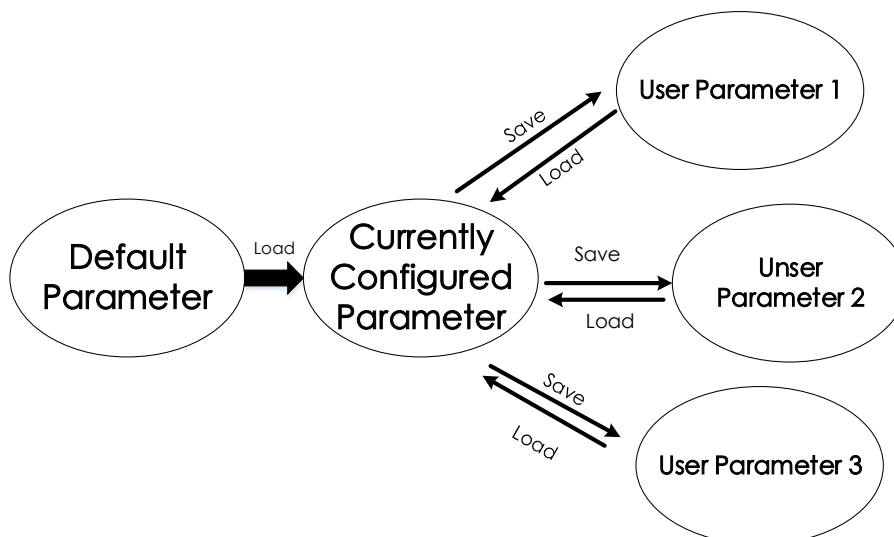


Figure 3-62 The Relationship Among Four Groups of Parameters

3.12.2 Embedded Information

The camera supports embedding information into the image data. The current supporting embedded information is:

- Timestamp
- Analog gain
- Exposure time

- Average brightness
- White balance gain
- Frame number
- Trigger counter
- ROI

The above eight information will be embedded in the image data one by one according to the client. If the information is not available, it will not be embedded.

The AOI will not affect the embedding. If the region of AOI is small, the first line of the image data is not enough for embedding. Then the information will be embedded in the second line.

Each embedded information of the available data will be put in the least 8 significant bits (No matter in MONO8 or RGB24).

The Embedded information is as following:

Timestamp: Take four bytes: transmission with four available data.

Data format: The data format of the timestamp is shown in Figure 3-63.

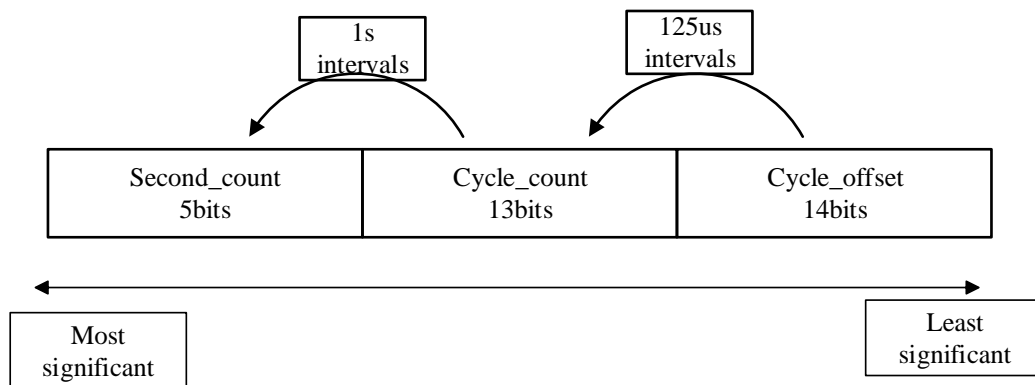


Figure 3-63 Timestamp Format

Analog gain: Take four bytes: transmission with four available data. Connect the least significant 8 bit of the four data together.

The data format of analog gain: Show the connected data directly. The range is form 0 to 1023. The Most Significant Bits will complement 0 automatically.

Exposure time: Take four bytes: transmission with four available data. Connect the least significant 8 bit of the four data together.

The data format of the exposure time: The connected least significant 8 bit of the four data is the number of the exposure line. Multiply the line number to 25.8 μ s. The result is the exposure time. The unit is μ s.

Average Brightness: Take four bytes: transmission with four available data. Connect the least significant 8 bit of the four data together.

The data format of the average brightness: Show the connected data directly. The range is form 0 to 4095. The Most Significant Bits will complement 0 automatically.

White balance gain: Contains three components of gain. It consumes 8 bytes in total, including two bytes for R channel of Gain, two bytes for G channel of Gain and four bytes for B channel of Gain. In other words, the transmission uses eight available image data.

Data format of white balance gain: Each channel consumes 2 bytes. The range is form 0 to 4095.

Frame number: Take four bytes.

Frame number format: Connect four bytes directly. The range is form 0 to 2³².

Trigger counter: Take 4 bytes. The range is from 0 to 2³².

ROI: Take three bytes in the initial position. The length and the width consume three bytes.

The data format of ROI:

- (1) The initial position of ROI takes three bytes. The length and the width consume three bytes.
- (2) The initial coordinate of ROI' column takes one and a half bytes. The initial coordinate of ROI's row takes one and a half bytes. The column coordinate is in the front of the row coordinate. The coordinate of the length and the width also consume one and a half bytes respectively.

Click Image Format Control in the attribute list. Select Embedded Image Info Selector. Choose the parameter in the drop-down box and finish setting, as shown in Figure 3-64.

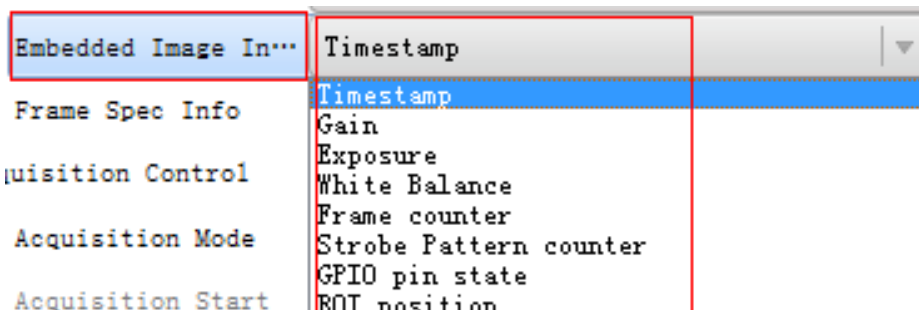


Figure 3-64 Embedded Information

3.13 Firmware Updating

Support firmware updating via LAN. After selecting available device in the device list, open Tool>Firmware Updating Tool in the Menu. Select available firmware updating kit, as shown in Figure 3-65.

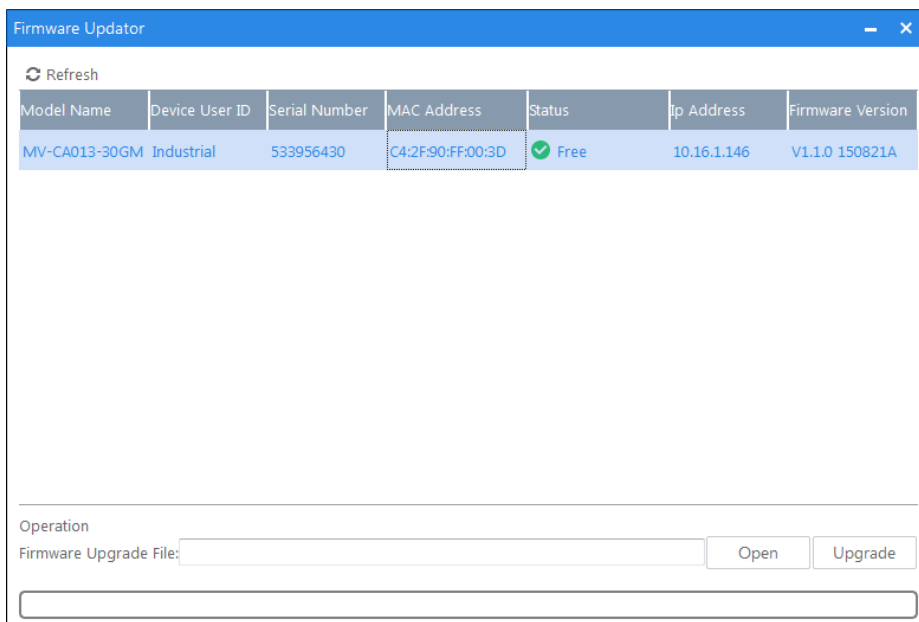


Figure 3-65 Firmware Update

Chapter 4

Troubleshooting

4.1 Indicator Status Definition

Table 4-1 LED Indicator Status

LED Status	Definition
Steady On	The LED indicator keeps lights on all the time
Unlit	The LED indicator keeps unlit all the time
Fast Flicker	The LED indicator flickers every 200ms to 300ms
Slow Flicker	The LED indicator flickers every 1000ms.
Extreme Slow Flicker	The LED indicator flickers every 2000ms.

4.2 Indicator Status Description

Table 4-2 LED Status Description

Indicator Status		Camera Status
Indicator in Red	Indicator in Blue	
-	-	The camera is off or hardware damaged.
-	Steady On	The camera is starting up.
Fast Flicker	-	Uboot loading failed.
Extreme Slow Flicker	-	IP address confliction or connection error
-	Slow Flicker	Idle while the camera is in the internal trigger mode.
-	Fast Flicker	Transmitting image while the camera is in the internal trigger mode.
	Extreme Slow Flicker	Transmitting image while the camera is in the external trigger mode.
The indicator flickers red and blue alternately every 1 second.		Upgrading the firmware.
Slow Flicker	-	Camera works normally but is not able to transmit data.
Steady on	-	Upgrading the firmware failed. Contact the technical support.

4.3 FAQ

Table 4-3 FAQ

No	Problem Description	Possible Reasons	Solutions
1	1. The camera cannot be detected by the client software. 2. The camera is detected by the client software but connecting failed.	1. The camera does not work properly. 2. The network cable is disconnected. 3. The camera and the PC that runs the MVS client software are not in the same subnet.	1. Confirm if the power supply of camera is well connected (via LED indicator), and the network connects properly (via network interface indicator). 2. Use MVS IP Configurator to detect the camera and change the IP address. 3. Confirm if the GenICam and network Filter driver are installed on the PC.
2	The camera is in read-only status.	The camera is connected with another client software.	Plug out the network cable, and replace it 3 seconds later.
3	The live view of camera is black.	1. The iris is closed. 2. Camera error	1. Open the iris. 2. Reboot the camera.
4	Camera cannot be triggered	1. Incorrect cable connection. 2. The camera works in the internal trigger mode	Make sure the trigger mode is correct and the external trigger is well connected.
5	The live view and image is normal, while the image saved could not be displayed properly.	The image format mismatches.	Make sure the image format what you saved is supported.

Chapter 5 Support

You can also get support through the following ways:

1. Website -- Visit www.hikrobotics.com/en/ for documentation and online technical support.
2. Hotline -- contact us at 400-700-5998.
3. Mail -- 400@hikvision.com, our support staff will reply in time.

Appendix

Revision History

Doc. ID No.	Version	Revision Date	Revision Description
UD.6L 0201D 2172A 01	V1.0.0	2016/02/19	Initial version.
UD.6L 0201D 2172A 01	V1.1.0	2017/10/11	<ol style="list-style-type: none"> 1. The sensor type for all cameras was specified in model details 2. The sensor size for all cameras was individually described in the specifications 3. The data format for all cameras was updated 4. The frame rate for all cameras was updated regardless of the resolution 5. The weight of the camera was changed from '67g' to '68g' in Section 1.3.1 on page 10 6. The specification for MV-CA013-20GC was added in Section 1.3.3 on page 11 7. The dynamic range was changed from '>80dB' to '>60dB' in Section 1.3.3 on page 11 8. The gain was changed from '0-24dB' to '0-15dB' in Section 1.3.3 on page 12 9. The exposure time was changed from '5μs-5sec' to '10μs-10sec' in Section 1.3.3 on page 12 10. The quantum efficiency curve for MV-CA013-20GC was added in Section 1.3.4 on page 13 11. The exposure time for MV-CA030-10GM/GC was changed from '20μs-10sec' to '26μs-10sec' in Section 1.3.7 on page 15 12. The dimension of the camera was changed from '44mm\times29mm\times58mm' to '44mm\times29mm\times60mm' in Section 1.3.7 on page 15 13. The specification of MV-CA050-20GC was added

		<p>14. The resolution for MV-CA050-20GM was corrected in Section 1.3.9 on page 16</p> <p>15. The exposure time was changed from ‘5μs-5s’ to ‘10μs-10sec’ in Section 1.3.9 on page 17</p> <p>16. The quantum efficiency curve for MV-CA050-20GC was added in Section 1.3.10 on page 17</p> <p>17. The specification of MV-CA060-10GM was removed in Section 1.3.11 on page 18</p> <p>18. The gain of MV-CA060-10GC was changed from ‘0-30dB’ to ‘0-20dB’ in Section 1.3.11 on page 18</p> <p>19. The exposure time was changed from ‘27μs-10s’ to ‘27μs-2.5sec’ in Section 1.3.11 on page 18</p> <p>20. The specifications and response curves of the following cameras were added: MV-CA060-11GM, MV-CA003-50GM/GC, MV-CA023-10GM/GC, MV-CA050-10GM/GC, MV-CE100-30GM/GC, MV-CA003-20GM/GC, MV-CA013-20GN, MV-CA050-20GN</p> <p>21. Support details were added in Chapter 5</p> <p>22. The typesetting of the manual was slightly changed</p> <p>23. Added Revision History</p> <p>24. Modified document name according to standardizing naming rule</p>
--	--	--



First Choice for Security Professionals